

PTZ Camera with HDBaseT Output



Version Information

| Version | Release Date | Notes |
|---------|--------------|---|
| 1 | Mar 2020 | Initial release |
| 2 | Jan 2021 | Firmware 2.5.8 <ul style="list-style-type: none">- Added network streaming feature, which enables the encoding and publishing of video content using H.264/H.265. Refer to Network Streaming (page 24) for more information.- Implemented new device user registration requirements to comply with CA SB-327.- Added video preview feature under the Visual Settings section of the web server to provide immediate feedback when making changes to camera settings. |

Welcome to Atlona!

Thank you for purchasing this Atlona product. We hope you enjoy it and will take an extra few moments to register your new purchase.

Registration only takes a few minutes and protects this product against theft or loss. In addition, you will receive notifications of product updates and firmware. Atlona product registration is voluntary and failure to register will not affect the product warranty.

To register your product, go to <http://www.atlona.com/registration>

Sales, Marketing, and Customer Support

Main Office

Atlona Incorporated
70 Daggett Drive
San Jose, CA 95134
United States

Office: +1.877.536.3976 (US Toll-free)
Office: +1.408.962.0515 (US/International)

Sales and Customer Service Hours
Monday - Friday: 6:00 a.m. - 4:30 p.m. (PST)

<http://www.atlona.com/>

International Headquarters

Atlona International AG
Ringstrasse 15a
8600 Dübendorf
Switzerland

Office: +41 43 508 4321

Sales and Customer Service Hours
Monday - Friday: 09:00 - 17:00 (UTC +1)

Operating Notes



IMPORTANT: Visit <http://www.atlona.com/product/AT-HDVS-CAM-HDBT> for the latest firmware updates and User Manual.

Atlona, Inc. (“Atlona”) Limited Product Warranty

Coverage

Atlona warrants its products will substantially perform to their published specifications and will be free from defects in materials and workmanship under normal use, conditions and service.

Under its Limited Product Warranty, Atlona, at its sole discretion, will either:

- repair or facilitate the repair of defective products within a reasonable period of time, restore products to their proper operating condition and return defective products free of any charge for necessary parts, labor and shipping.

OR

- replace and return, free of charge, any defective products with direct replacement or with similar products deemed by Atlona to perform substantially the same function as the original products.

OR

- refund the pro-rated value based on the remaining term of the warranty period, not to exceed MSRP, in cases where products are beyond repair and/or no direct or substantially similar replacement products exist.

Repair, replacement or refund of Atlona products is the purchaser’s exclusive remedy and Atlona liability does not extend to any other damages, incidental, consequential or otherwise.

This Limited Product Warranty extends to the original end-user purchaser of Atlona products and is non-transferrable to any subsequent purchaser(s) or owner(s) of these products.

Coverage Periods

Atlona Limited Product Warranty Period begins on the date of purchase by the end-purchaser. The date contained on the end-purchaser’s sales or delivery receipt is the proof purchase date.

Limited Product Warranty Terms – New Products

- 10 years from proof of purchase date for hardware/electronics products purchased on or after June 1, 2013.
 - PTZ motor is not covered under the 10 year warranty, the PTZ motor is covered for 3 years.
- 3 years from proof of purchase date for hardware/electronics products purchased before June 1, 2013.
- Lifetime Limited Product Warranty for all cable products.

Limited Product Warranty Terms – Refurbished (B-Stock) Products and Discontinued Products

- 3 years from proof of purchase date for all Refurbished (B-Stock) and Discontinued hardware and electronic products purchased on or after June 1, 2013.

Remedy

Atlona recommends that end-purchasers contact their authorized Atlona dealer or reseller from whom they purchased their products. Atlona can also be contacted directly. Visit www.atlona.com for Atlona’s contact information and hours of operation. Atlona requires that a dated sales or delivery receipt from an authorized dealer, reseller or end-purchaser is provided before Atlona extends its warranty services. Additionally, a return merchandise authorization (RMA) and/or case number, is required to be obtained from Atlona in advance of returns.

Atlona requires that products returned are properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization or case number will be refused. Atlona, at its sole discretion, reserves the right to reject any products received without advanced authorization. Authorizations can be requested by calling 1-877-536-3976 (US toll free) or 1-408- 962-0515 (US/international) or via Atlona’s website at www.atlona.com.

Exclusions

This Limited Product Warranty excludes:

- Damage, deterioration or malfunction caused by any alteration, modification, improper use, neglect, improper packaging or shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature.

Atlona, Inc. (“Atlona”) Limited Product Warranty

- Damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Atlona to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product.
- Equipment enclosures, cables, power supplies, batteries, LCD displays, and any accessories used in conjunction with the product(s).
- Products purchased from unauthorized distributors, dealers, resellers, auction websites and similar unauthorized channels of distribution.

Disclaimers

This Limited Product Warranty does not imply that the electronic components contained within Atlona’s products will not become obsolete nor does it imply Atlona products or their electronic components will remain compatible with any other current product, technology or any future products or technologies in which Atlona’s products may be used in conjunction with. Atlona, at its sole discretion, reserves the right not to extend its warranty offering in instances arising outside its normal course of business including, but not limited to, damage inflicted to its products from acts of god.

Limitation on Liability

The maximum liability of Atlona under this limited product warranty shall not exceed the original Atlona MSRP for its products. To the maximum extent permitted by law, Atlona is not responsible for the direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or under any other legal theory. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

To the maximum extent permitted by law, this limited product warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral or written, express or implied. To the maximum extent permitted by law, Atlona specifically disclaims all implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose. If Atlona cannot lawfully disclaim or exclude implied warranties under applicable law, then all implied warranties covering its products including warranties of merchantability and fitness for a particular purpose, shall provide to its products under applicable law. If any product to which this limited warranty applies is a “Consumer Product” under the Magnuson-Moss Warranty Act (15 U.S.C.A. §2301, ET SEQ.) or other applicable law, the foregoing disclaimer of implied warranties shall not apply, and all implied warranties on its products, including warranties of merchantability and fitness for the particular purpose, shall apply as provided under applicable law.

Other Conditions

Atlona’s Limited Product Warranty offering gives legal rights, and other rights may apply and vary from country to country or state to state. This limited warranty is void if (i) the label bearing the serial number of products have been removed or defaced, (ii) products are not purchased from an authorized Atlona dealer or reseller. A comprehensive list of Atlona’s authorized distributors, dealers and resellers can be found at www.atlona.com.

Important Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT OPEN ENCLOSURE OR EXPOSE TO RAIN OR MOISTURE. NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the product.




The information bubble is intended to alert the user to helpful or optional operational instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
11. Only use attachments/accessories specified by Atlona.
12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
13. Unplug this product during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC Statement

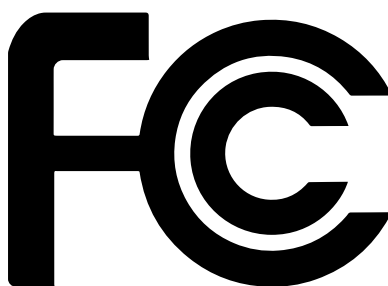

FCC Compliance and Advisory Statement: This hardware device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.

Table of Contents

| | |
|--|-----------|
| Introduction | 8 |
| Features | 8 |
| Package Contents | 8 |
| Panel Description | 9 |
| Installation | 10 |
| Connection Instructions | 10 |
| Mounting Instructions | 10 |
| Connection Diagram | 12 |
| Basic Operation | 13 |
| Initialization Procedure | 13 |
| Home Position | 14 |
| Field of View | 15 |
| Sample Calculations Table | 15 |
| Calculating Specific Values | 16 |
| Controlling the Camera | 17 |
| Tilt | 17 |
| Pan (Rotation) | 17 |
| Tilt and Pan Combinations | 18 |
| Zoom | 19 |
| Focus | 19 |
| Backlight Compensation (BLC) | 20 |
| Standby Mode | 20 |
| Managing Presets | 21 |
| Saving Presets | 21 |
| Clearing a Preset | 21 |
| Recalling Presets | 21 |
| Multiple Camera Control | 22 |
| Assigning / Changing the Camera Address ID | 22 |
| Selecting a Camera for Control | 22 |
| Network Streaming | 23 |
| Video Stream Configuration | 23 |
| Audio Stream Configuration | 26 |
| RTMP Publishing | 28 |
| RTP Multicast | 30 |
| Configuration and Management Interfaces | 32 |
| Web Server | 32 |
| Registration | 32 |
| Logging In | 33 |
| Status Page | 34 |
| Firmware Page | 35 |
| System Page | 36 |
| Network Page | 38 |
| User Page | 40 |
| Encoding Page | 41 |
| Publishing Page | 43 |
| RTP Multicast Page | 44 |
| Reset Page | 45 |
| Audio Page | 46 |
| Picture Page | 48 |
| Focus Page | 50 |
| Exposure Page | 51 |
| Noise Reduction Page | 53 |
| Style Page | 54 |
| OSD Page | 55 |

Table of Contents

| | |
|--------------------------|-----------|
| Video Out Page | 56 |
| Control Page | 57 |
| IR Remote and OSD | 58 |
| IR Remote Control | 58 |
| OSD | 58 |
| Remote Functions | 60 |
| Appendix | 61 |
| Specifications | 61 |

Introduction

The Atlona **AT-HDVS-CAM-HDBT** is an enterprise-grade PTZ camera designed for use in video conferencing and other applications such as lecture capture and distance learning. It features an HDBaseT output for extending video, power, and camera control over distances up to 330 feet (100 meters). The HDVS-CAM-HDBT is ideal for remotely interfacing into HDBaseT equipped switchers and extenders, for use with a video conferencing codec, lecture capture appliance, or PC equipped for video capture. Camera control over HDBaseT or TCP/IP facilitates remote integration into AV control systems. The HDVS-CAM-HDBT delivers high performance, professional-quality imaging with video resolutions up to 1080p @ 60 Hz, as well as fast and accurate auto-focusing, and a fast yet quiet pan and tilt mechanism. Also available is H.264 or H.265 streaming over IP with support for RTMP and RTSP protocols. This PTZ camera is ideal for large meeting spaces, classrooms, training rooms, and many other environments. The HDVS-CAM-HDBT is available in black or white

Features


- Designed for video conferencing and other applications such as lecture capture and distance education.
- HDBaseT output for extending video, power, and camera RS-232 control up to 330 feet (100 meters) @ 1080p with CAT5e/6 cable.
- Remote powering over HDBaseT – local powering available with included power supply.
- High performance imaging, fine detail, and color rendering with 1/2.8" low-noise, HD CMOS sensor.
- Delivers HD video resolutions including 1080p @ 60 Hz.
- Up to 255 camera presets available, 10 accessible from IR remote.
- Fast and accurate auto focus, plus auto white balance and auto exposure modes.
- Fast and quiet pan and tilt mechanism.
- Multi-element zoom lens with 10x optical zoom and a 60.9° horizontal field of view.
- Picture controls available for brightness, color, saturation, contrast, sharpness, and gamma.
- TCP/IP, RS-232, and IR control – convenient handheld IR remote control included.
- Supports VISCA, Pelco-D, and Pelco-P camera control protocols.
- H.264 and H.265 video over IP network streaming available, with support for RTMP and RTSP protocols.
- Stereo 3.5 mm audio input available for AAC or MP3 streaming over IP.
- Easy, GUI-based configuration using integrated web server.
- Camera can be mounted on a wall, or inverted for ceiling installation with the optional AT-HDVS-CAM-CMNT ceiling mount kit.
- Includes installation guide, wall mounting bracket, IR remote control, VISCA to RS-232 DB-9 adapter, lens cap, and external universal power supply.
- Available in black or white.
- Three-year limited product warranty.

Package Contents

- 1 x AT-HDVS-CAM-HDBT-BK or AT-HDVS-CAM-HDBT-WH
- 1 x Wall mounting plate
- 1 x 1/4 200UNC screws
- 1 x IR Remote Control
- 1 x VISCA to RS-232 DB-9 adapter
- 2 x AAA battery
- 1 x 12 V DC power supply
- 1 x Installation Guide

Panel Description

Front (AT-HDVS-CAM-HDBT-WH shown)

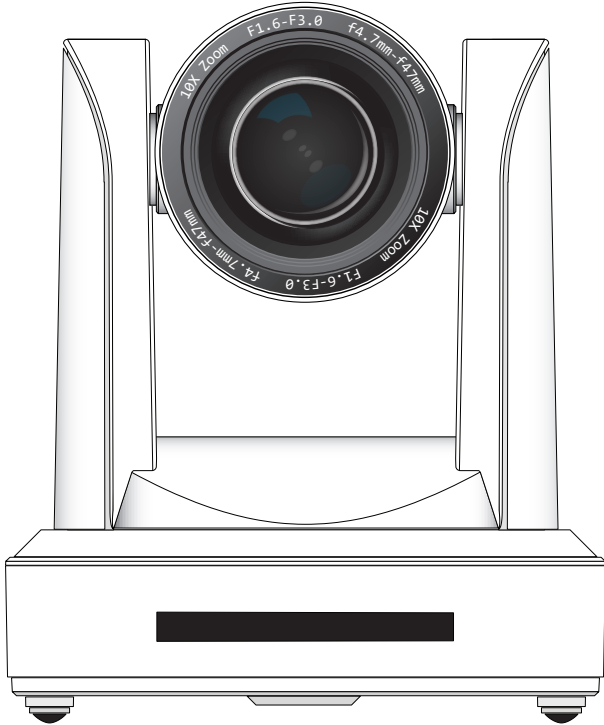

Back (AT-HDVS-CAM-HDBT-BK shown)




- 1. RS-232**
Connect included VISCA to RS-232 adapter here to control the camera with a third party software or hardware controller.
- 2. AUDIO IN**
Port not used.
- 3. HDBaseT OUT**
Connect to a compatible PoE switcher or receiver, such as: AT-OME-RX11, AT-OME-PS62, etc.

- 4. LAN**
Connect to a network switch to control the unit via TCP/IP or web server.
- 5. DC 12V**
Connect the included 12V power supply to this port.

Installation

Connection Instructions

1. Connect the Ethernet cable to the LAN port on the back of the AT-HDVS-CAM-HDBT.
2. Connect to a category cable (CAT-5e or better) from the HDBaseT port to a compatible PoE A/V switcher or receiver, such as the AT-OME-RX11.
3. *Optional* Connect the Visca to RS-232 cable to the Visca port for RS-232 control. Note that RS-232 can also be connected to an AT-OME-RX11 or other receiver that supports RS-232 for remote control.

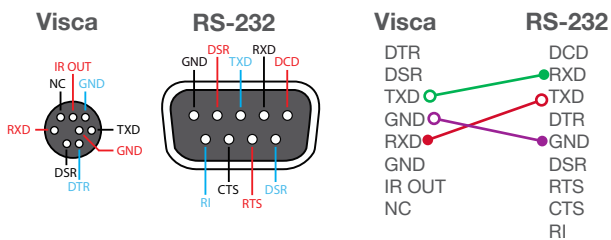

4. *Optional* Connect the DC 12V power cable to the unit. This is only required if the camera is not being powered using PoE.


Mounting Instructions

The AT-HDVS-CAM-HDBT has two installation options, wall mount (included) and ceiling mount (purchased separately).

Wall Mount installation

Install the AT-HDVS-CAM-HDBT, 4 M6 swelling bolts, 1 1/4 20 UNC bolt, 4 M6 nuts and shims, the included wall mount bracket, and the AT-HDVS-CAM-HDBT are needed.


1. Install the M6 swelling bolts in a rectangular pattern on the wall, 100 mm wide and 50 mm high.
2. Attached the wall mount bracket onto the wall, by placing them on the M6 swelling bolts and securing it with the M6 nuts and shims.
3. Once the wall mount bracket is secure on the wall, place the camera on the top of the wall mount bracket and secure it with the 1/4 20UNC bolt.

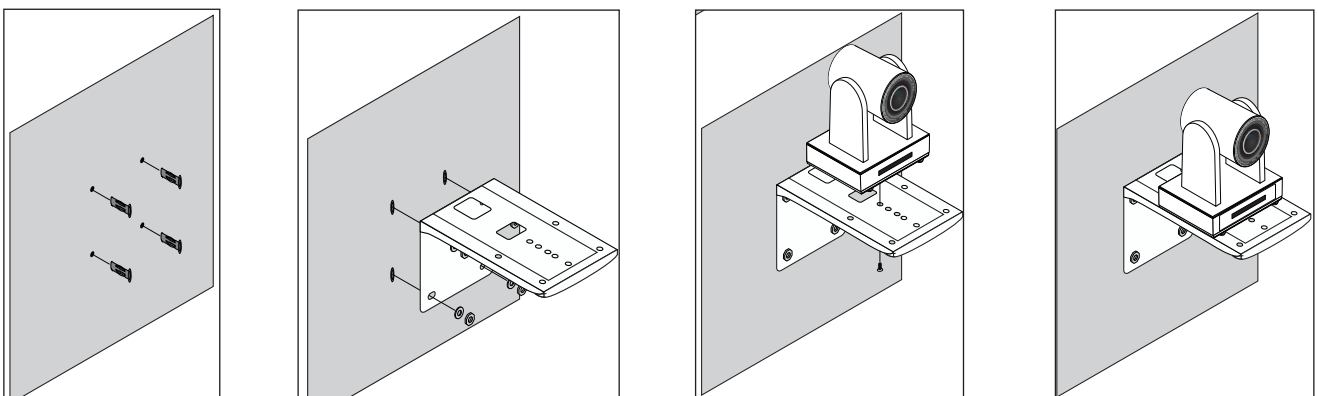

Ceiling Mount installation


To install the AT-HDVS-CAM-HDBT, 4 PA3X30 self-tapping screws, 4 PM3X6 screws, 4 screw stoppers, 1 1/4 20 UNC screw, the optional ceiling upper and lower covering plates, and the AT-HDVS-CAM-HDBT are needed.

1. Install the 4 screw stoppers in the ceiling.
2. Connect the upper ceiling covering plate to the screw stoppers using the PA3X30 self-tapping screws.
3. Connect the lower ceiling covering plate to the bottom of the AT-HDVS-CAM-HDBT using the 1/4 20 UNC screw.
4. Mount the lower ceiling covering plate to the upper ceiling plate using 3 PM3X6 bolts.

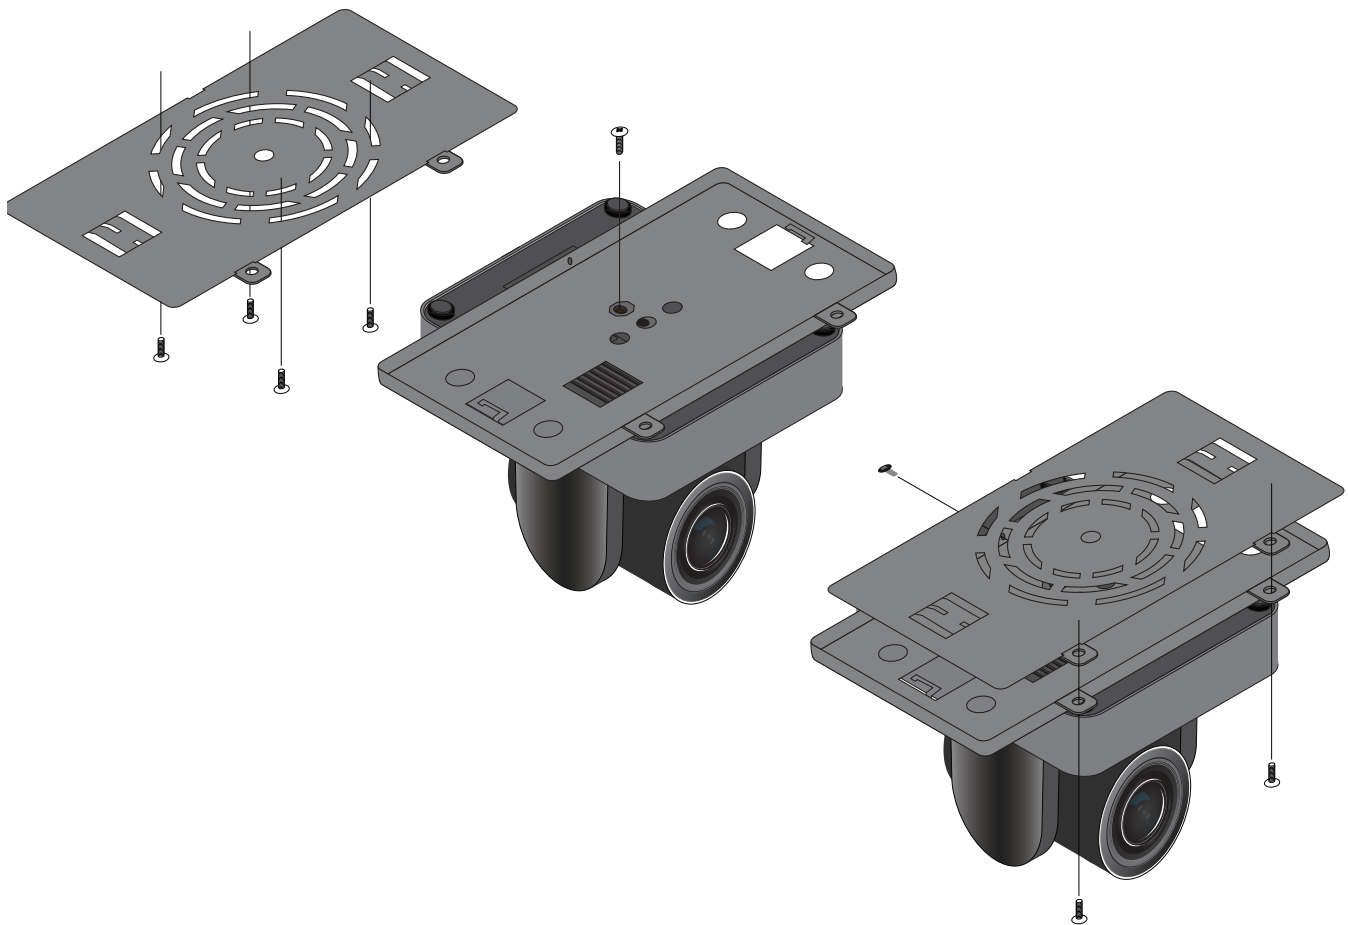

i NOTE: The camera picture will need to be inverted for video to be viewed correctly. View the AT-HDVS-CAM-HDBT manual for instructions on how to invert video.

Connection Diagram

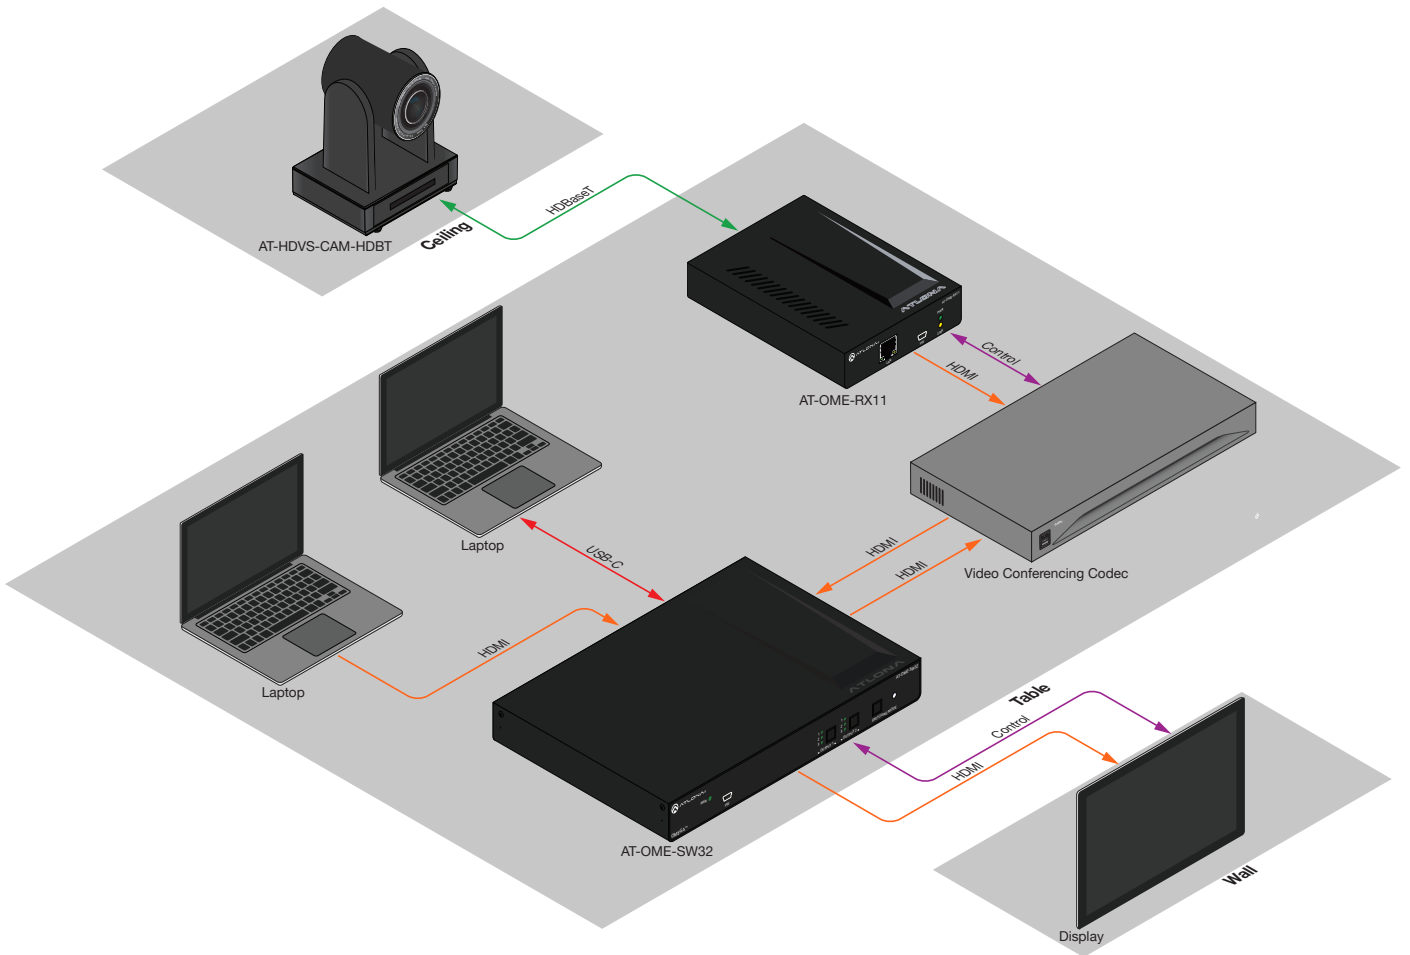

Basic Operation

Initialization Procedure

Once the camera is powered, it will go through an initialization procedure. During this process, a flashing red LED indicator will be displayed. When the AT-HDVS-CAM-HDBT is ready for use, the LED indicator on the front panel will be solid green. The AT-HDVS-CAM-HDBT will repeat this process each time it is powered on.



Flashing red LED during initialization



Camera "ready" state

Home Position

“Home” position is a term that is used throughout this manual. When the AT-HDVS-CAM-HDBT is in home position, the camera is facing forward and has no tilt angle, as shown in the illustration below:



Front




Left Side

Field of View

When positioning the camera in a huddle room or similar area, it will be helpful to know the viewing area of the camera, based on a fixed target. The viewable area of the camera is called the *linear field of view* or sometimes referred to as the *image plane*.

The illustration below shows the AT-HDVS-CAM-HDBT pointed at a fixed target.

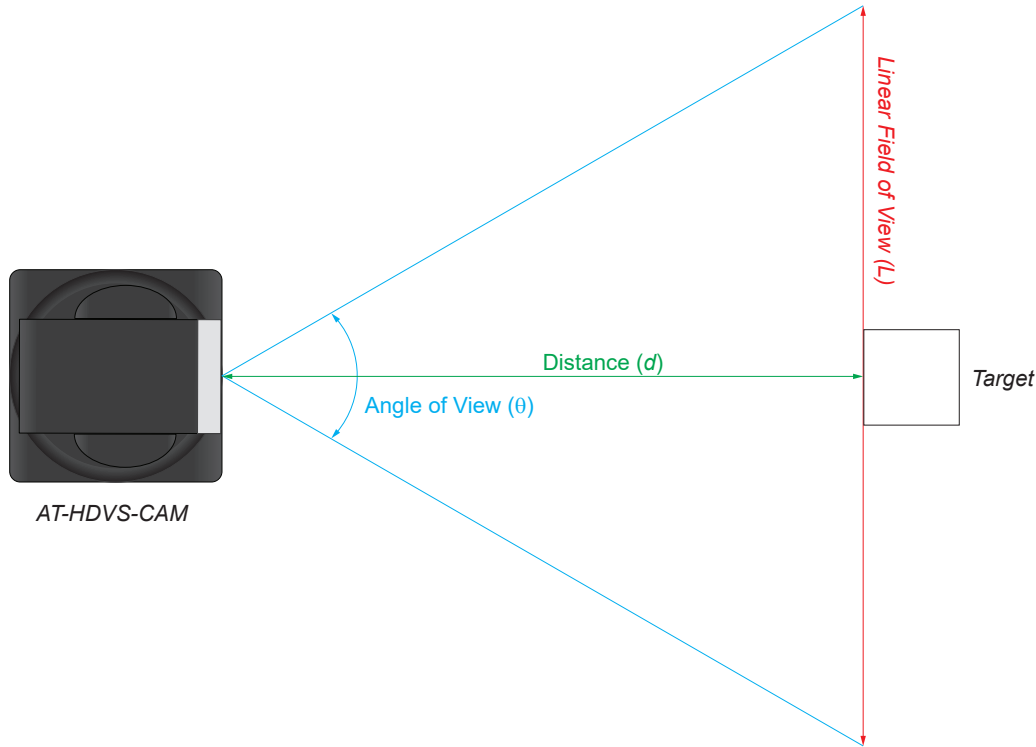

Sample Calculations Table

The following table provides a list of predefined distances, which the camera must be placed from the target, in order to capture the required Linear Field of View (L). The Angle of View, for the camera, has been set to 60.9° (wide-angle).

To calculate custom values, refer to [Calculating Specific Values](#) (page 17).

| Angle of View (θ), in degrees | Distance (d), in feet | Linear Field of View (L), in feet |
|--|---------------------------|---------------------------------------|
| 60.9° | 5 | 5.875076864 |
| | 10 | 11.75015373 |
| | 15 | 17.62523059 |
| | 20 | 23.50030746 |
| | 25 | 29.37538432 |

Calculating Specific Values

In order to calculate custom values, this section introduces some trigonometric formulas which can be used to find the Linear Field of View (L), Distance (d), or the Angle of View (θ). The derivation of each formula is beyond the scope of this manual. As long as any two values are known, the third value can be calculated as follows:

Linear Field of View (FOV)

$$L = 2 \cdot d \cdot \tan\left(\frac{\theta}{2}\right)$$

Angle of View

$$\theta = 2 \cdot \arctan\left(\frac{L}{2 \cdot d}\right)$$

Distance to target


$$d = \frac{L}{2 \cdot \tan\left(\frac{\theta}{2}\right)}$$



NOTE: When calculating the Angle of View, using a calculator that is set to radians, multiply the result by $\frac{\pi}{180}$ to convert the answer to degrees. The value of π can be approximated as 3.1415.

Example

In the following diagram, the camera angle of view is set to 54.7° . The viewing area to be captured is measured to be 9 feet. How far from the target must the camera be placed in order to capture this area?

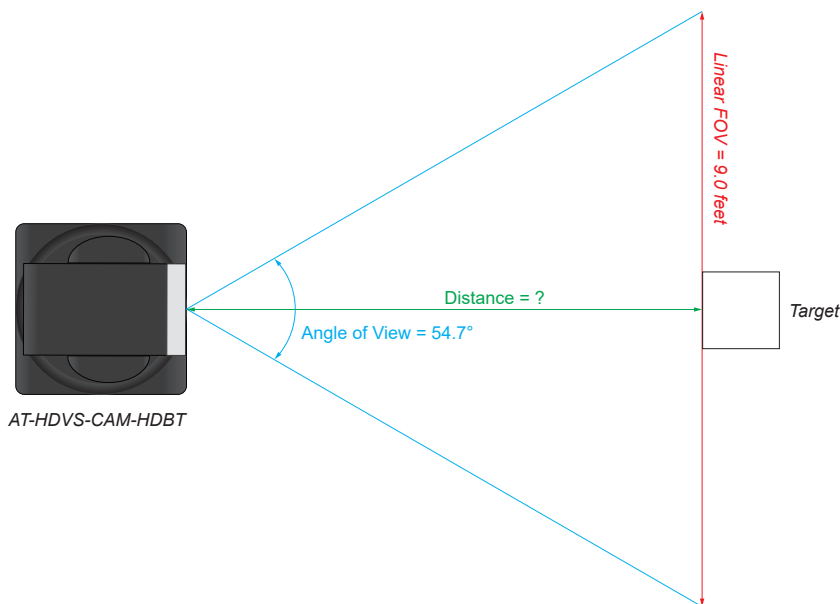


- Use the following formula: $d = \frac{L}{2 \cdot \tan\left(\frac{\theta}{2}\right)}$
- Substitute the known values for each variable in the equation. In this case, we know both the linear FOV and the angle of view. Therefore:
 $L = 9$
 $\theta = 54.7$
- The equation becomes: $d = \frac{9}{2 \cdot \tan\left(\frac{54.7}{2}\right)}$
- $\tan\left(\frac{54.7}{2}\right) = 0.5172$
- Multiplying this result by 2 gives: 1.0344
- Dividing 9 by 1.0344 , yields: 8.700 . Therefore, the camera must be placed 8.7 feet from the target.

Controlling the Camera

The AT-HDVS-CAM-HDBT can be controlled using the included IR remote control, RS-232, TCP/IP, or through the web server. Refer to the [Web Server \(page 33\)](#) for more information about accessing the web server.


Tilt

The camera tilt range is approximately -45 degrees to +90 degrees. Use one of the following methods to adjust the camera tilt.

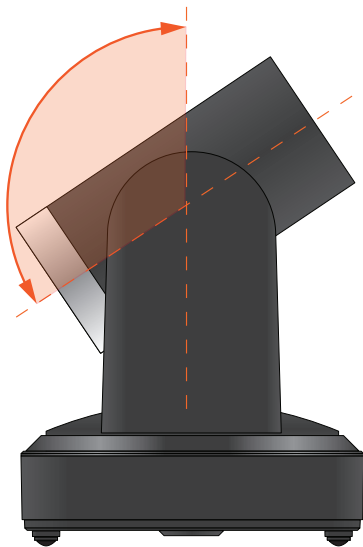


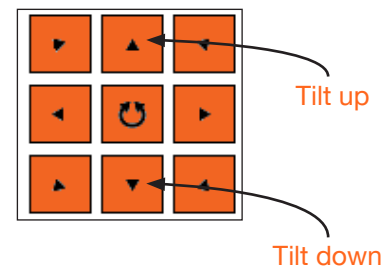
IR Remote Control

- Press and release the up or down arrow button to adjust the tilt of the camera in small increments.
- Press and hold the up or down arrow button to adjust the camera tilt at a faster rate.
- Press the **HOME** button to return the camera to the “home” position.

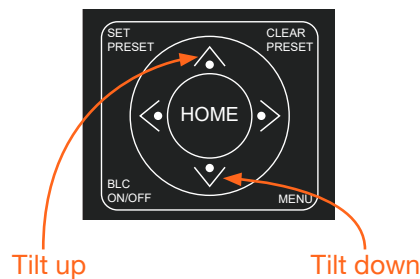


web server

1. Click **Control** in the side menu bar.
2. Click the up-arrow or down-arrow button to tilt the camera up or down, respectively.
3. Click the  icon in the center to return the camera to the “home” position.




Pan (Rotation)

The camera pan range is approximately 360 degrees. Use one of the following methods to adjust the camera pan.

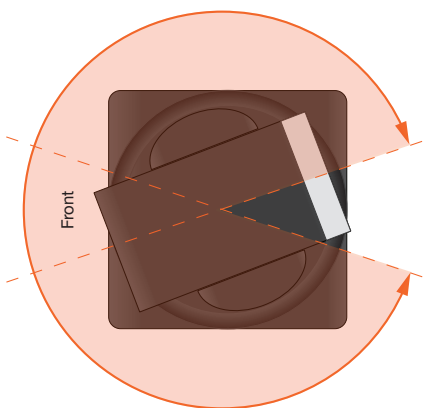


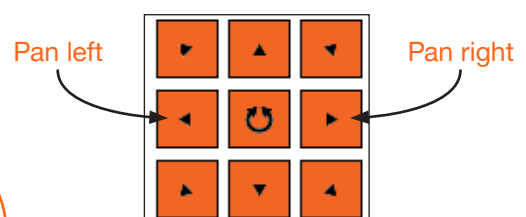
IR Remote Control

- Press and release the left or right arrow button to adjust the camera tilt in small increments.
- Press and hold the left-arrow or right-arrow button to adjust the camera tilt at a faster rate.
- Press the **HOME** button to return the camera to the “home” position.

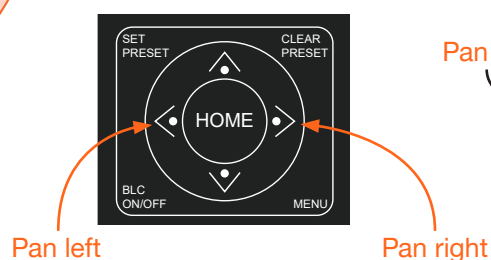



web server

1. Click **Control** in the side menu bar.
2. Click the left arrow or right arrow button to tilt the camera up or down, respectively.
3. Click the  icon in the center to return the camera to the “home” position.




Tilt and Pan Combinations

The web server provides a method for combining both tilt and pan motion. Note that this function is *not* available on the included IR Remote Control.

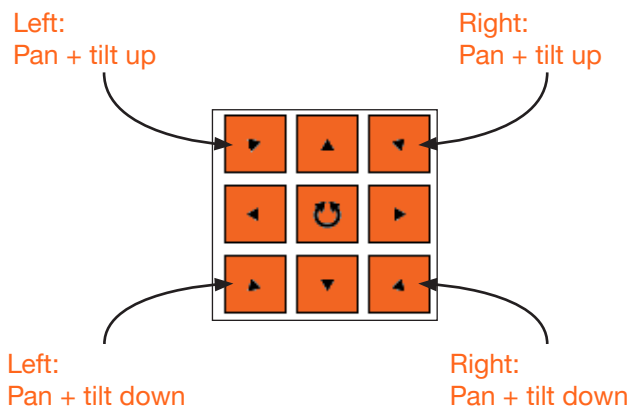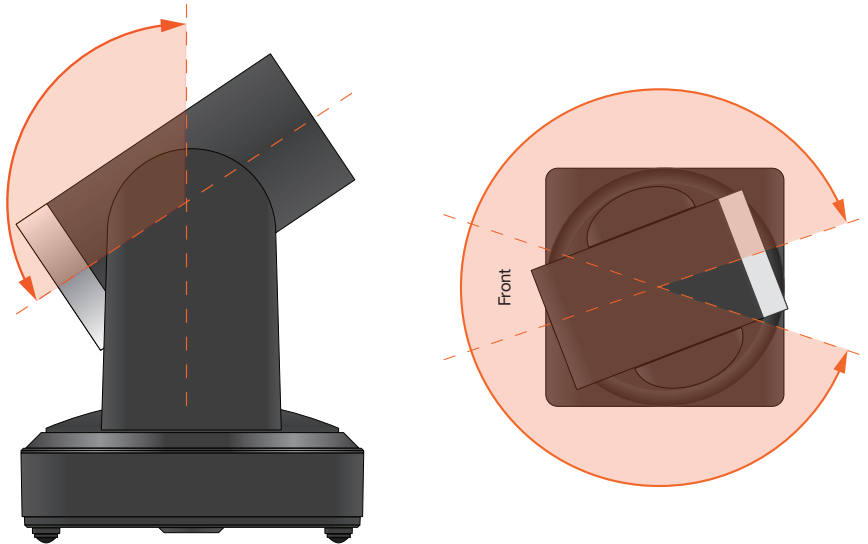

web server (only)


1. Click **Control** in the side menu bar.
2. Click the diagonal arrow buttons to simultaneously tilt and pan the camera in the desired direction:
 - **Upper Diagonal-left arrow**
Pans and rotates camera up and to the left.
 - **Lower Diagonal-left arrow**
Pans and rotates camera down and to the left.
 - **Upper Diagonal-right arrow**
Pans and rotates camera up and to the right.
 - **Lower Diagonal-right arrow**
Pans and rotates camera down and to the right.
3. Click the  icon in the center to return the camera to the “home” position.

Zoom

The camera provides a zoom factor up to 10x. Use one of the following methods to adjust the camera zoom.

IR Remote Control

- Locate the **ZOOM** rocker switch on the IR Remote Control.
- Press and release + to zoom-in or press - to zoom-out.
- Press and hold these buttons to zoom-in or zoom-out at a faster rate.

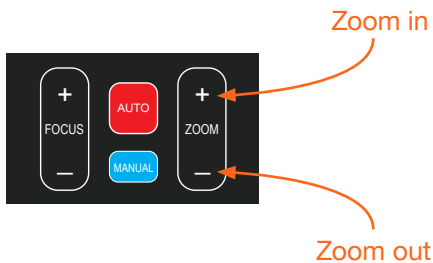

web server

1. Click **Control** in the side menu bar.
2. Click + to zoom-in or click - to zoom out.




Focus

When positioning the camera on an object, it may be necessary to adjust the focus for a clear image. The AT-HDVS-CAM-HDBT can be set to auto focus or manual focus. By default, the AT-HDVS-CAM-HDBT is set to auto-focus mode.

NOTE: In order to manually control the focus, the AT-HDVS-CAM-HDBT must be in manual focus mode. Press the **MANUAL** button to enter manual focus mode.


IR Remote Control

- Press and release the **MANUAL** button.
- Locate the **FOCUS** rocker switch on the IR Remote Control.
- Press and release + to increase focus on objects in the foreground. Press and release the - to focus on objects in the background.
- Press and hold these buttons to adjust the focus at a faster rate.

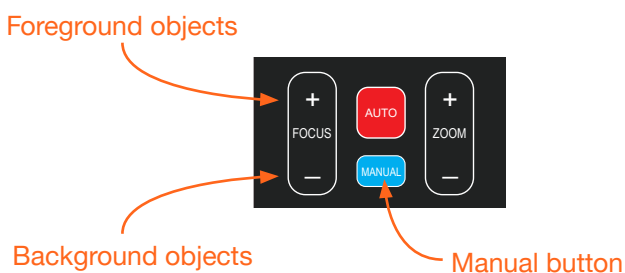

web server

1. Click **Control** in the side menu bar.
2. Set the AT-HDVS-CAM-HDBT to manual focus mode by selecting **Manual** from the **Focus Mode** drop-down list.
3. Click + to focus on foreground objects or click - to focus on background objects.

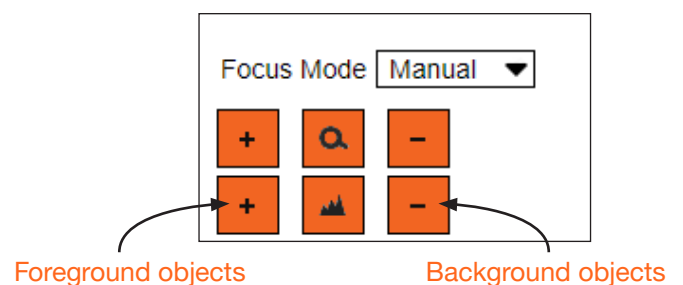

Backlight Compensation (BLC)

BLC is a feature which automatically adjusts the exposure control of the camera. When enabled, BLC will attempt to increase the ambient foreground light and “darken” any background light. For example, a subject standing in front of a window in the daytime, will produce a sillhouetted effect. Enabling BLC will compensate for the difference in lighting.

IR Remote Control


1. Point the IR Remote Control at the front of the AT-HDVS-CAM-HDBT.
2. Press and release the **BLC ON/OFF** button to toggle BLC on or off.



BLC on/off button

web server

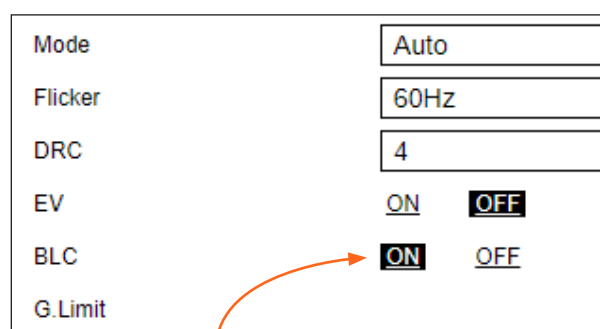

1. Click **Exposure** in the side menu bar.
2. Click ON to enable BLC. Click OFF to disable BLC.




BLC ON

Standby Mode

Placing the AT-HDVS-CAM-HDBT in standby mode will power-down the camera. Placing the camera in standby mode is managed using the IR Remote Control.

1. Point the IR Remote Control at the front of the AT-HDVS-CAM-HDBT.
2. Press and hold the  button for three seconds.
3. The camera will rotate 90 degrees and the camera lens assembly will tilt approximately 45 degrees. The camera is now in standby mode.
4. Press and hold the  button for three seconds to wake the camera. After the camera is awake, it will return to the home position.

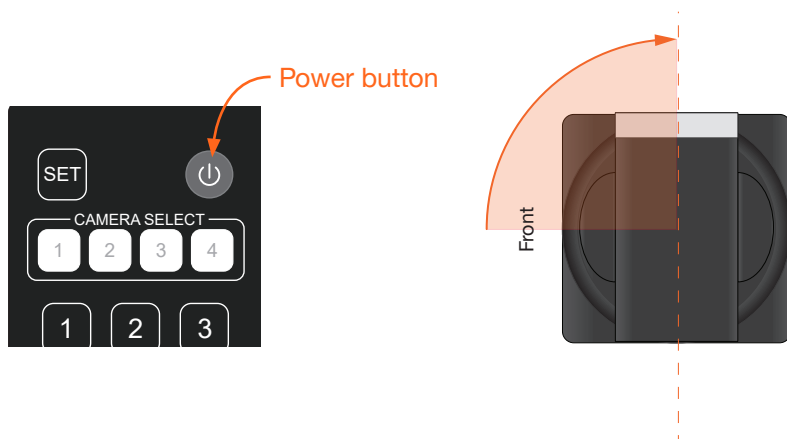

Power button




NOTE: The camera will always be set to the home position after this sequence is performed. To return the camera to the last position, either position it manually or recall the saved preset.

Managing Presets

Camera positions can be stored to local memory and recalled at a later time. Presets are stored and recalled using the included IR Remote Control. Up to 10 presets can be saved.

Saving Presets

1. Set the camera in the desired position.
2. Point the IR Remote Control at the front of the AT-HDVS-CAM-HDBT.
3. Press the **SET PRESET** button.
4. Press the desired number on the IR Remote Control keypad to assign the position of the camera to the preset.

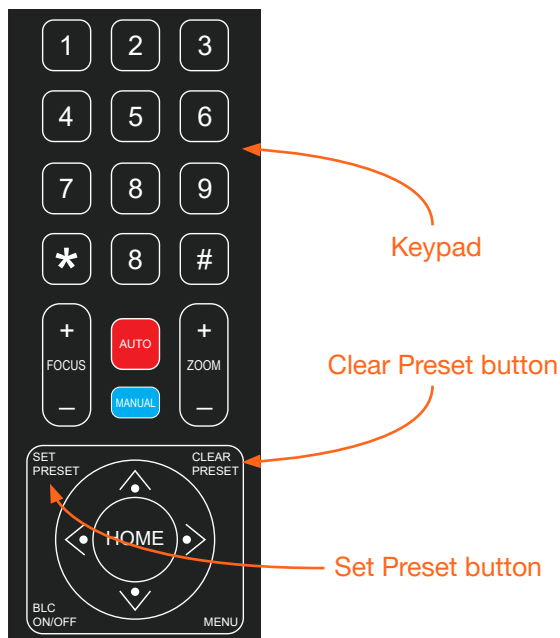

Clearing a Preset

Presets can be erased. It is not necessary to clear a preset, before saving a new camera position in the same preset. If a preset is saved to an existing preset, it will be overwritten.

1. Press the **CLEAR PRESET** button.
2. Press the desired number on the IR Remote Control keypad to clear the preset.

i NOTE: To clear all presets, press and release the [#] key on the keypad, three times.

Recalling Presets

1. Point the IR Remote Control at the front of the AT-HDVS-CAM-HDBT.
2. Press the number of the desired preset from the IR Remote Control keypad.
3. The camera will be set to the position defined by the preset.

Multiple Camera Control

There may be environments where more than one camera is being used. The included IR remote control unit provides a way to select and control up to four separate cameras.


Assigning / Changing the Camera Address ID

Before the IR remote control unit can be used to control different camera, each camera must be assigned an address ID. It is possible to assign multiple cameras with the same ID. However, if all cameras are within close vicinity, IR remote control commands will be distributed to all cameras. This may not always be desirable.

1. Point the IR remote control at the front of the AT-HDVS-CAM-HDBT.
2. Assign the camera an ID by sequentially pressing the following series of buttons listed in the table below.


| Camera Address ID | Keystrokes |
|-------------------|------------------|
| 1 | [*] + [#] + [F1] |
| 2 | [*] + [#] + [F2] |
| 3 | [*] + [#] + [F3] |
| 4 | [*] + [#] + [F4] |

3. Follow the above steps for each camera. Each camera can have a distinct ID. For cameras that have been assigned unique ID addresses, it may be helpful to place a label on each camera for future reference.

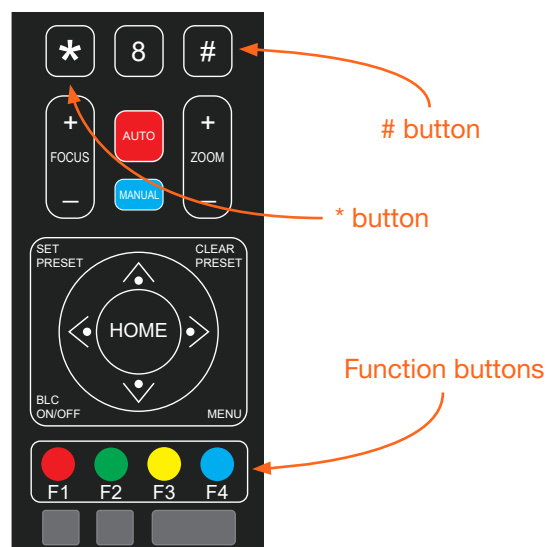

Selecting a Camera for Control


1. Point the IR remote control at the front of the desired AT-HDVS-CAM-HDBT.
2. Press the button of the camera ID, which is being controlled, within the **CAMERA SELECT** button group on the IR remote control.
3. Press the buttons on the IR remote control for the desired operation of the camera.

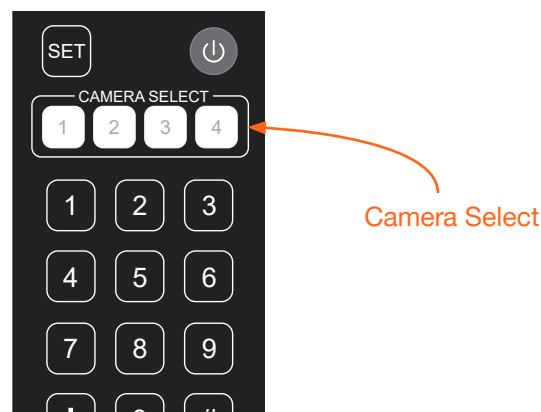

Network Streaming

Video Stream Configuration

1. Login to the web server.
2. Click **Encoding** in the side menu bar.
3. Under the **Video Encoding** section, select the encoding protocol by clicking **Enabled**, next to **RTSP** (Real Time Streaming Protocol) and **RTMP** (Real Time Messaging Protocol). Either or both protocols can be set to **Enabled**. When enabled, the checkbox will contain a check mark.

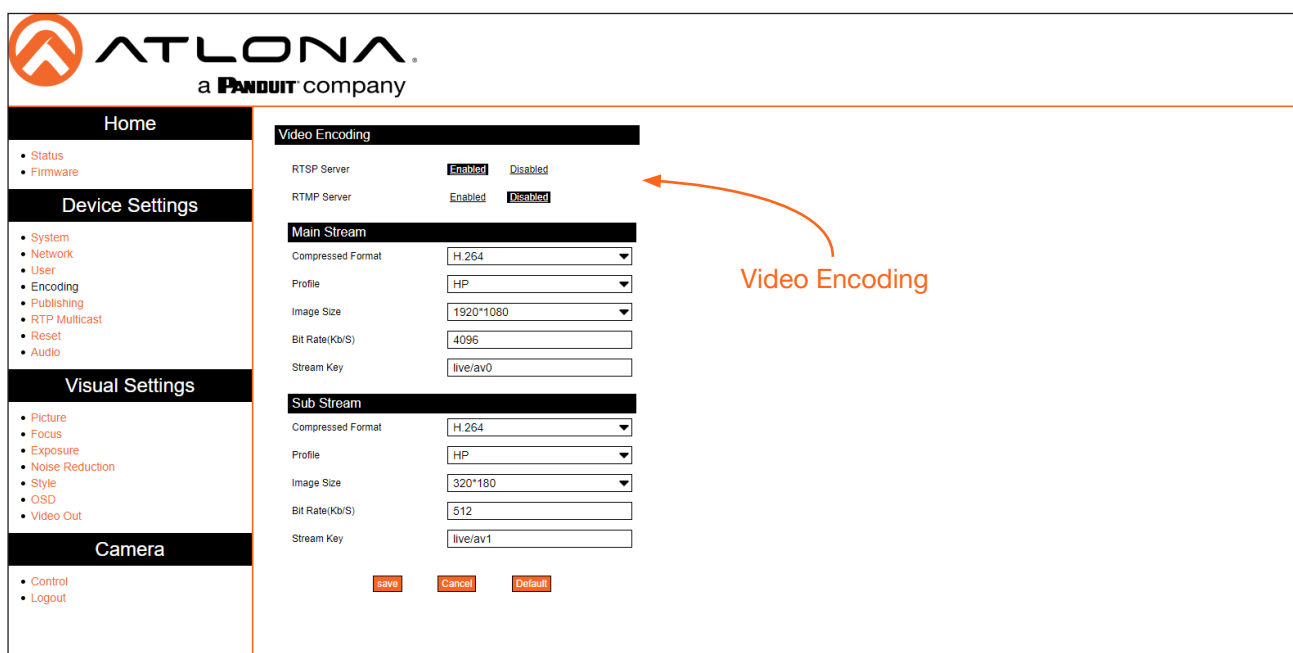

4. Under the **Main Stream** and **Sub Stream** sections, click each of the drop-down lists to assign the desired settings. Both **Main Stream** and **Sub Stream** are used to view the camera's footage.

Main Stream is the primary video feed and provides the highest quality video. **Main Stream** provides the highest video quality, and is the stream used by a digital recorder when saving footage to hard disk. Adjusting these settings will affect the recording size and available recording time on the hard disk.

Sub Stream is the secondary video feed and provides a lower quality video stream. This stream is used to stream video to computers and mobile devices. Adjusting these settings will affect the bandwidth of the stream.

Compressed Format

The desired encoding format

| Format | Description |
|--------------|--|
| H.264 (AVC) | Advanced Video Codec - Industry-standard codec that provides good-quality compressed video output. |
| H.265 (HVEC) | High-Efficiency Video Coding - Provides a higher compression ratio than H.264, thus reducing the bandwidth necessary for high-resolution (2K/4K) video capture. |

Profile

These options are only available when **H.264** is selected. Profiles are a set of encoding processes for H.264.

| Profile | Description |
|---------|---|
| BP | Baseline Profile - Supports a limited set of processes and is designed to meet the needs of mobile devices. |
| MP | Main Profile - Supports a good number of processes and is typically used for devices such as set-top boxes. |
| HP | High Profile - Supports all processes of H.264 and targets FullHD (1080p) applications such as Blu-ray and satellite streams. |

Image Size

These resolutions are available for all codecs and profiles.

| Resolution | Resolution | Resolution |
|------------|------------|------------|
| 1920x1080 | 1280x720 | 640x480 |

Bit Rate (kb/s)

Enter the desired bit rate in this field.

| Encoding Protocol | Bit Rate Range |
|-------------------|-------------------|
| H.264 | 64 ... 20480 kb/s |
| H.265 | 64 ... 40960 kb/s |

Stream Key

Enter the stream key in this field. This key (code) is used to identify the stream, allowing the stream to be displayed on a web site.


Main Stream - Recommended Settings for H.264

| Resolution | Bit Rate |
|------------|-----------|
| 1920x1080 | 4096 kb/s |
| 1280x720 | 2048 kb/s |

Sub Stream - Recommended Settings for H.264

| Resolution | Bit Rate |
|------------|-----------|
| 640x480 | 1024 kb/s |
| 640x360 | 1024 kb/s |
| 320x240 | 512 kb/s |
| 320x180 | 512 kb/s |

5. Click the **Save** button to commit changes.
6. Click **Reset** in the side menu bar and click the **Reboot** button.

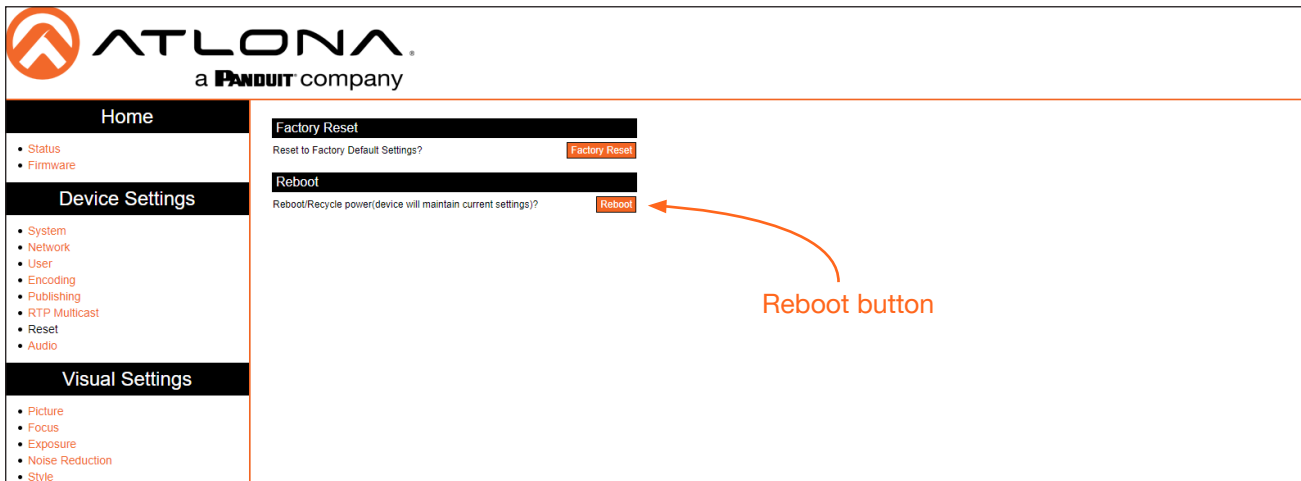


IMPORTANT: After settings have been updated, streams should be re-pulled and restarted to ensure best video quality. If the camera has been power-cycled, then it will be necessary to re-pull both RTMP and RTSP streams.

Audio Stream Configuration

1. Login to the web server.
2. Click **Audio** in the side menu bar.
3. Under the **Audio Configuration** section, click the **Enable** checkbox. When enabled, the checkbox will contain a check mark.



IMPORTANT: After enabling or disabling the **Enable** checkbox, the AT-HDVS-CAM-HDBT must be rebooted in order for changes to take effect.

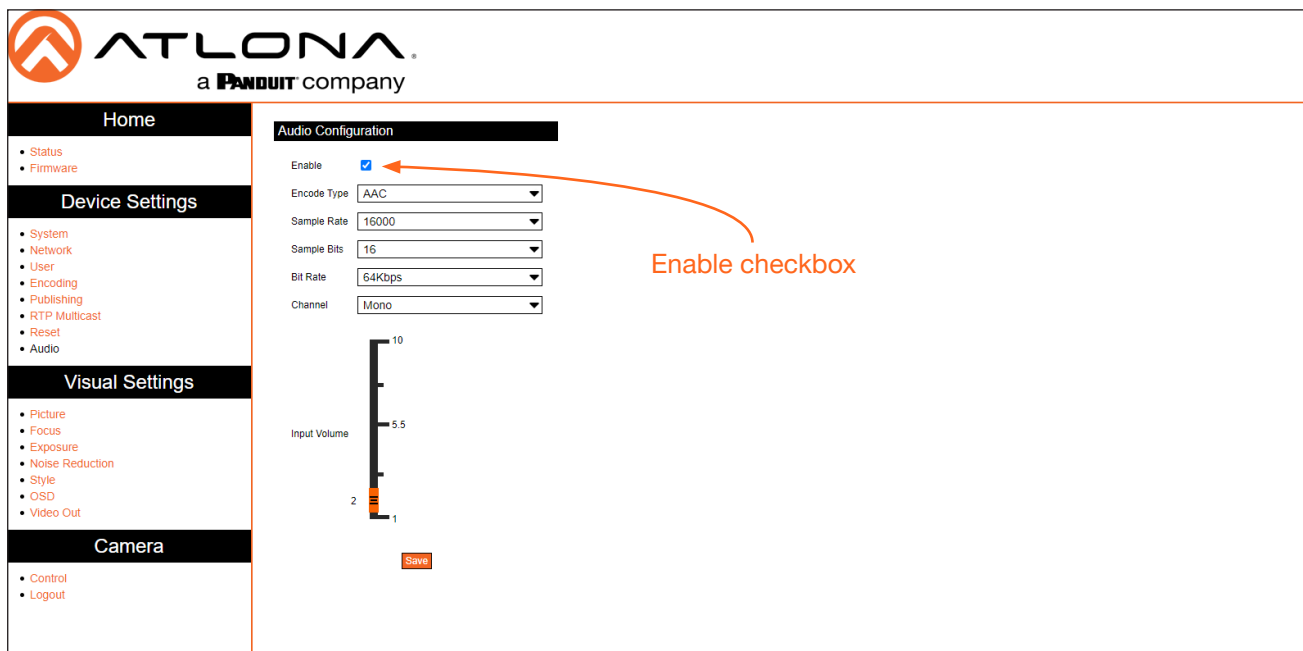

4. Click each of the drop-down lists to assign the desired settings.

Encode Type

Specifies the audio encoding type.

| Encoding | Bit Rate Range |
|----------|--|
| AAC | Advanced Audio Encoding - Industry-standard lossy compression for digital audio. Exhibits a higher sound quality than MP3. |
| MP3 | MPEG-1/MPEG-2 Audio Layer III - Uses lossy data-compression, discarding some data, resulting in lower-bandwidth, high-quality audio. |

Sample Rate

Selects the sample rate in Hertz. Available options are **16000** (16 kHz), **32000** (32 kHz), **44100**, (44.1 kHz) and **48000** (48 kHz).

Sample Bits

This option is set to **16** and cannot be changed.

Bit Rate

Selects the bit rate. Available options are **32 kbps**, **48 kbps**, **64 kbps**, **96 kbps**, and **128 kbps**.

Channel


Selects the number of channels that are heard on the output.

| Encoding | Bit Rate Range |
|----------|---------------------------------|
| Mono | Single-channel audio stream. |
| Stereo | Two-channel (L/R) audio stream. |

Input Volume

Click and drag this slider to adjust the input volume.

5. Click the **Save** button.
6. Click **Reset** in the side menu bar and click the **Reboot** button.

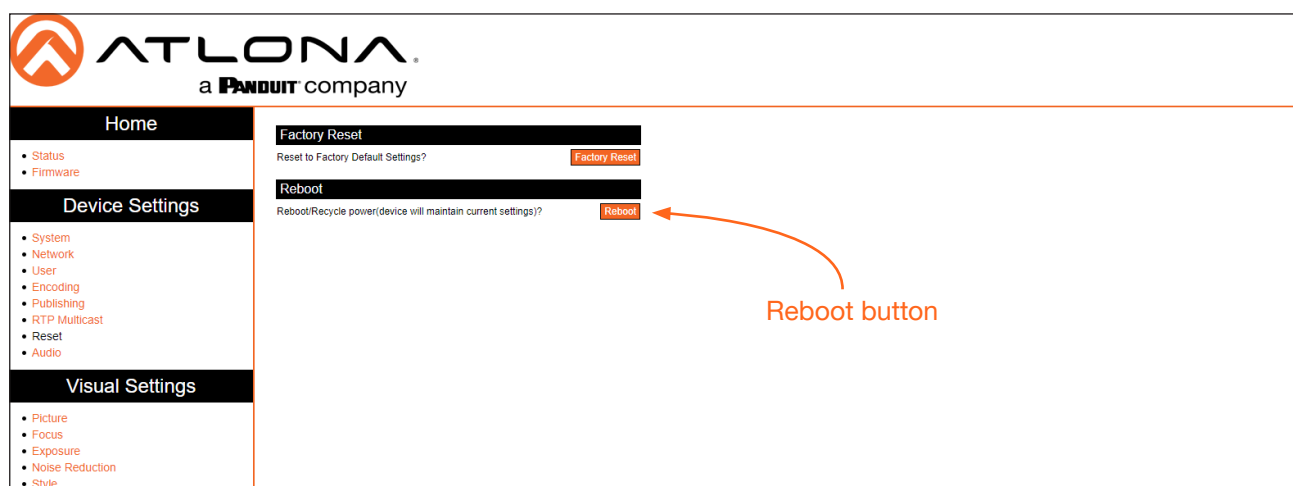



Example: Accessing the Network Stream

Accessing an RTMP stream using VLC Media Player:

`rtmp://[camera-ip-address]/[stream-key]`

Accessing an RTSP stream using VLC Media Player:


`rtsp://[camera-ip-address]/[stream-key]`

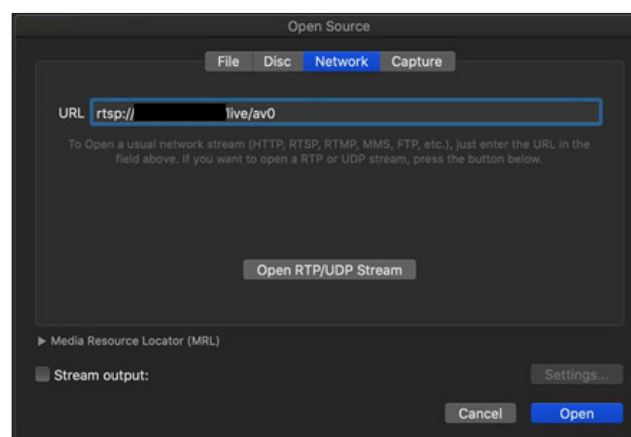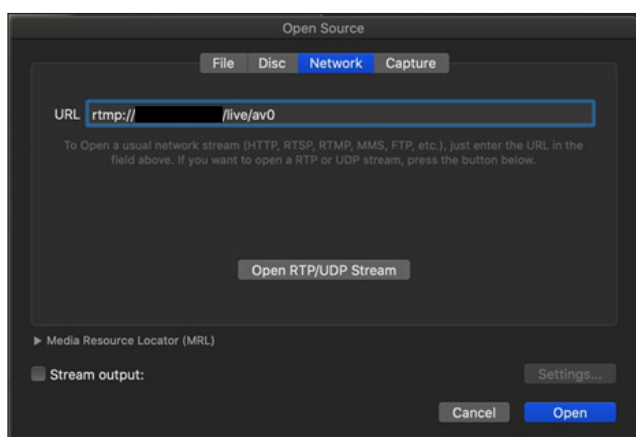

RTMP Publishing

In order to for the stream to be pushed to live-streaming platforms, such as YouTube™, Twitch®, and others, follow the procedure below.

1. Login to the web server.
2. Click **Publishing** in the side menu bar. RTMP and RTSP Server on the encoding tab should already be enabled. If not, please refer to [Video Stream Configuration \(page 24\)](#) for more information.
3. Click the **Enable** checkbox to enable the **Main Stream** and/or **Sub Stream**.

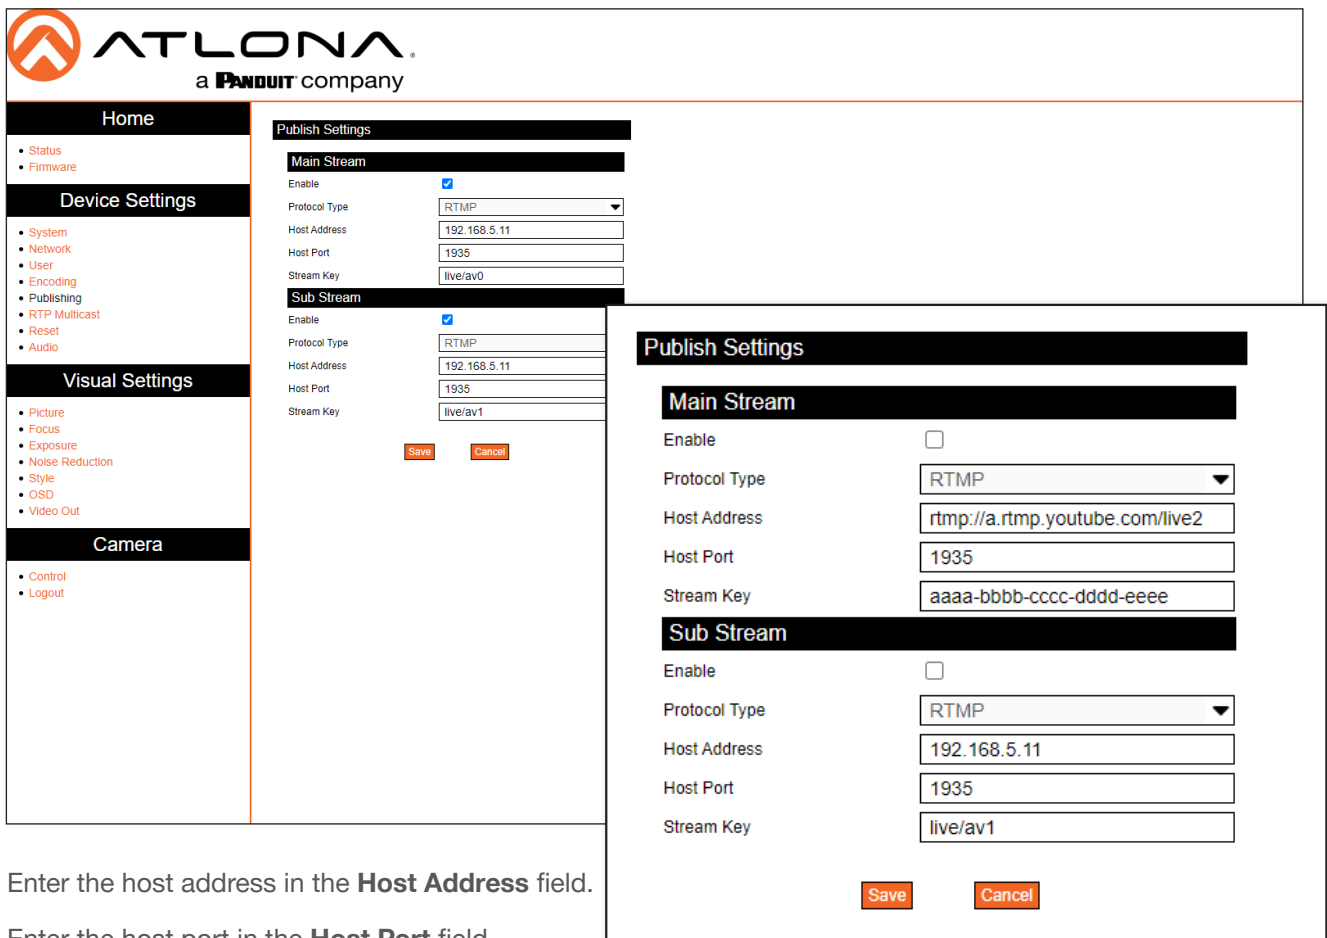

The screenshot displays the ATLONA web interface. The left sidebar contains navigation menus for Home, Device Settings, Visual Settings, and Camera. The main content area shows the 'Publish Settings' page. It is divided into two sections: 'Main Stream' and 'Sub Stream'. Each section has an 'Enable' checkbox, a 'Protocol Type' dropdown menu (set to RTMP), and input fields for 'Host Address', 'Host Port', and 'Stream Key'. The 'Main Stream' section has 'Enable' checked, 'Host Address' as 192.168.5.11, 'Host Port' as 1935, and 'Stream Key' as live/av0. The 'Sub Stream' section has 'Enable' checked, 'Host Address' as 192.168.5.11, 'Host Port' as 1935, and 'Stream Key' as live/av1. An inset image shows a zoomed-in view of the 'Publish Settings' form. In this inset, the 'Main Stream' 'Enable' checkbox is unchecked, and the 'Host Address' is set to rtmp://a.rtmp.youtube.com/live2. The 'Sub Stream' section remains the same as in the main screenshot.

4. Enter the host address in the **Host Address** field.
5. Enter the host port in the **Host Port** field.
6. Enter the stream key in the **Stream Key** field. See inset image, above, for an example.
7. Click the **Save** button to commit changes.

Refer to the next page for more examples.

Example: Configuring Streams on Social Platforms



NOTE: For YouTube Live, Audio Encoding must be enabled. If streaming to Facebook Live platform, then use host port 443.

Configuring Facebook Live

- The Server URL correlates to Host Address.
- Port number directly follows the URL.
- Stream Key is the Stream Key.

Configuring YouTube Live


- The Server URL correlates to Host Address.
- Port number directly follows the URL.
- Stream Key is the Stream Key.

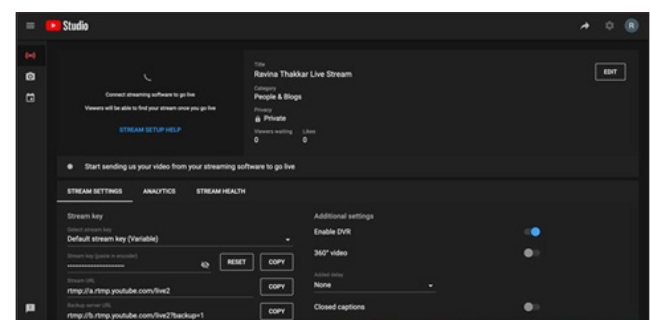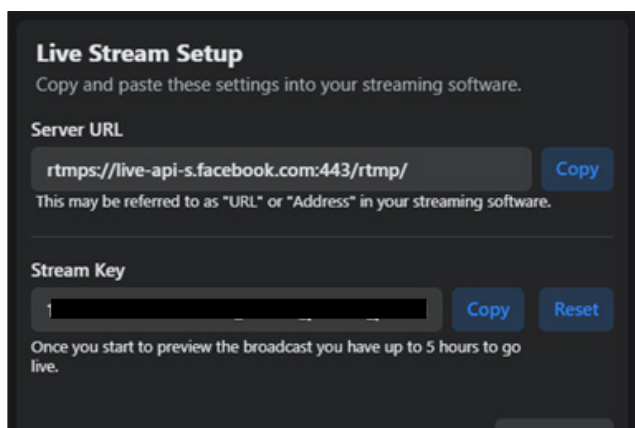

RTP Multicast

In order to for the stream to be published to a multicast address, follow the procedure below.

1. Login to the web server.
2. Click **RTP Multicast** in the side menu bar.
3. Click the **Enable** checkbox to enable the **Main Stream** and/or **Sub Stream**. When enabled, the checkbox will contain a check mark.

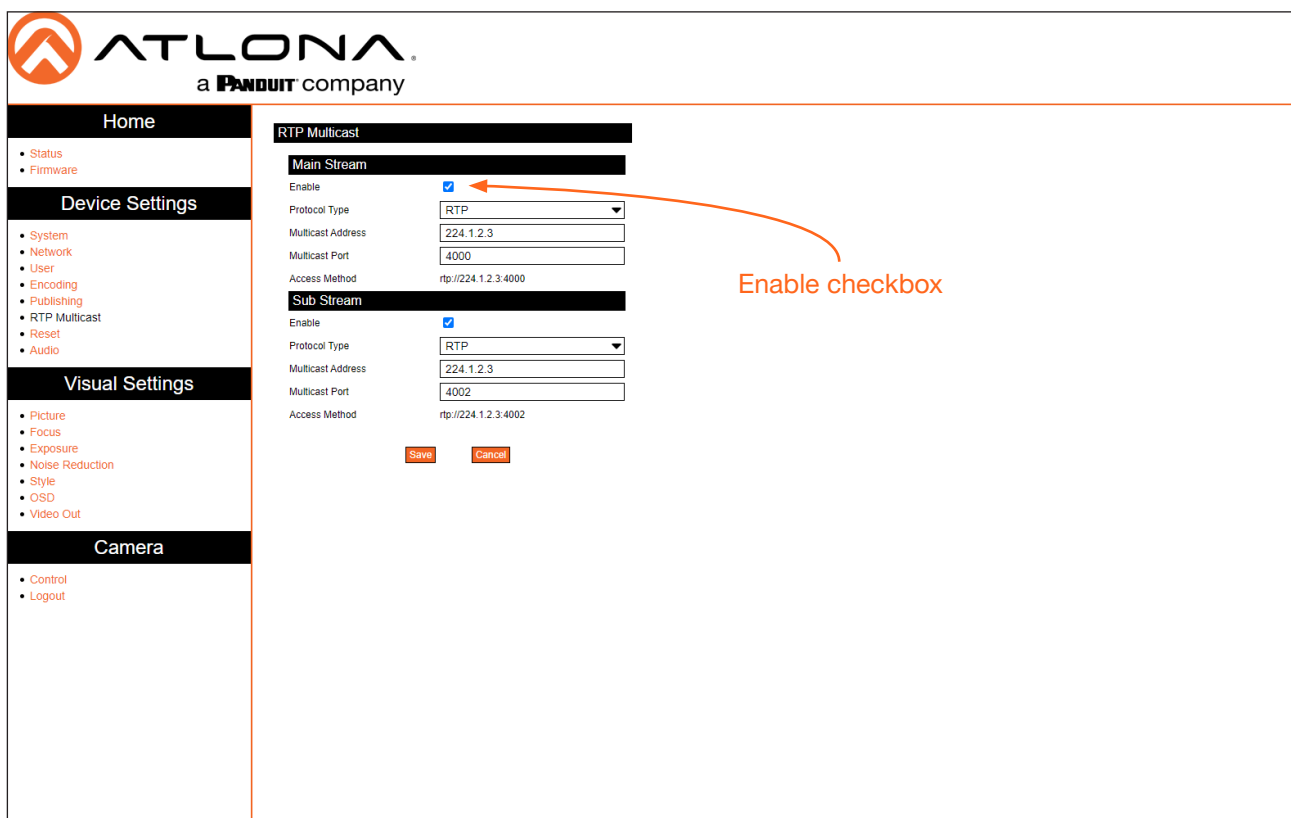

The screenshot shows the ATLONA web interface. On the left is a navigation menu with sections: Home (Status, Firmware), Device Settings (System, Network, User, Encoding, Publishing, RTP Multicast, Reset, Audio), Visual Settings (Picture, Focus, Exposure, Noise Reduction, Style, OSD, Video Out), and Camera (Control, Logout). The main content area is titled 'RTP Multicast' and contains two sections: 'Main Stream' and 'Sub Stream'. Each section has an 'Enable' checkbox (checked), a 'Protocol Type' dropdown (set to RTP), 'Multicast Address' (224.1.2.3), 'Multicast Port' (4000), and 'Access Method' (rtp://224.1.2.3:4000). At the bottom are 'Save' and 'Cancel' buttons. An orange arrow points to the 'Enable' checkbox in the 'Main Stream' section with the label 'Enable checkbox'.

4. Click the **Protocol Type** drop-down list to select the protocol type. Enter the host port in the **Host Port** field.

| Protocol | Description |
|----------|----------------------------|
| RTP | Real Time Protocol |
| TS | Transport Stream (MPEG-TS) |


5. Enter the multicast address in the **Multicast Address** field.
6. Enter the multicast port in the **Multicast Port** field.
7. Click the **Save** button to commit changes.

Refer to the next page for configuration examples.

Example: Access Methods using VLC Media Player


Access Method: RTP

`rtp://[multicast-ip-address]:[port]`

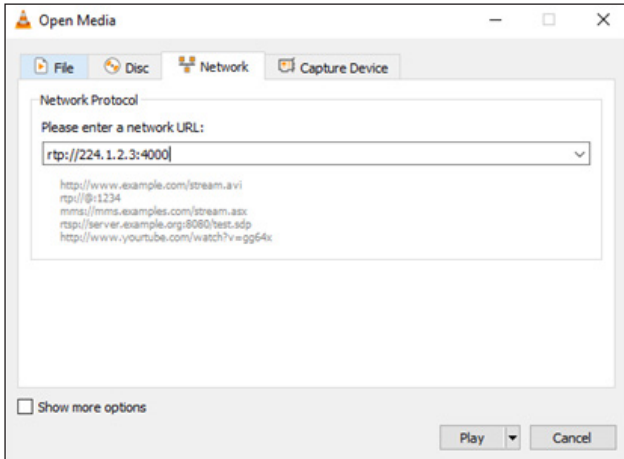

Access Method: UDP

`udp://[multicast-ip-address]:[port]`

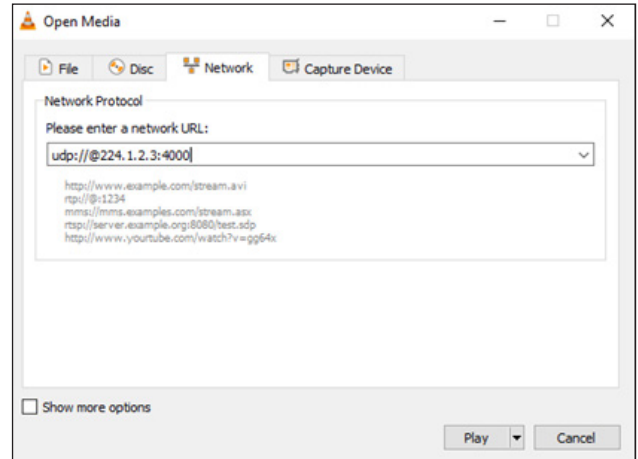

Configuration and Management Interfaces

Web Server

Main operation of the AT-HDVS-CAM-HDBT is handled through the built-in web server. In order to access the web server, the IP address of the unit must be known.


Registration

1. Launch a desired web browser and enter the IP address of the AT-HDVS-CAM-HDBT in the address bar.
2. Enter the desired username in the **User Name** field. In the example below, the username `admin` is used.
3. Enter the desired password in the **Password** field. All passwords will be masked, when entered.



IMPORTANT: The password must contain a minimum of 8 characters, including: 1 uppercase character, 1 lowercase character, and 1 number.

4. Verify the password by entering it in the **Re-enter password** field.
5. Click the **Register** button.

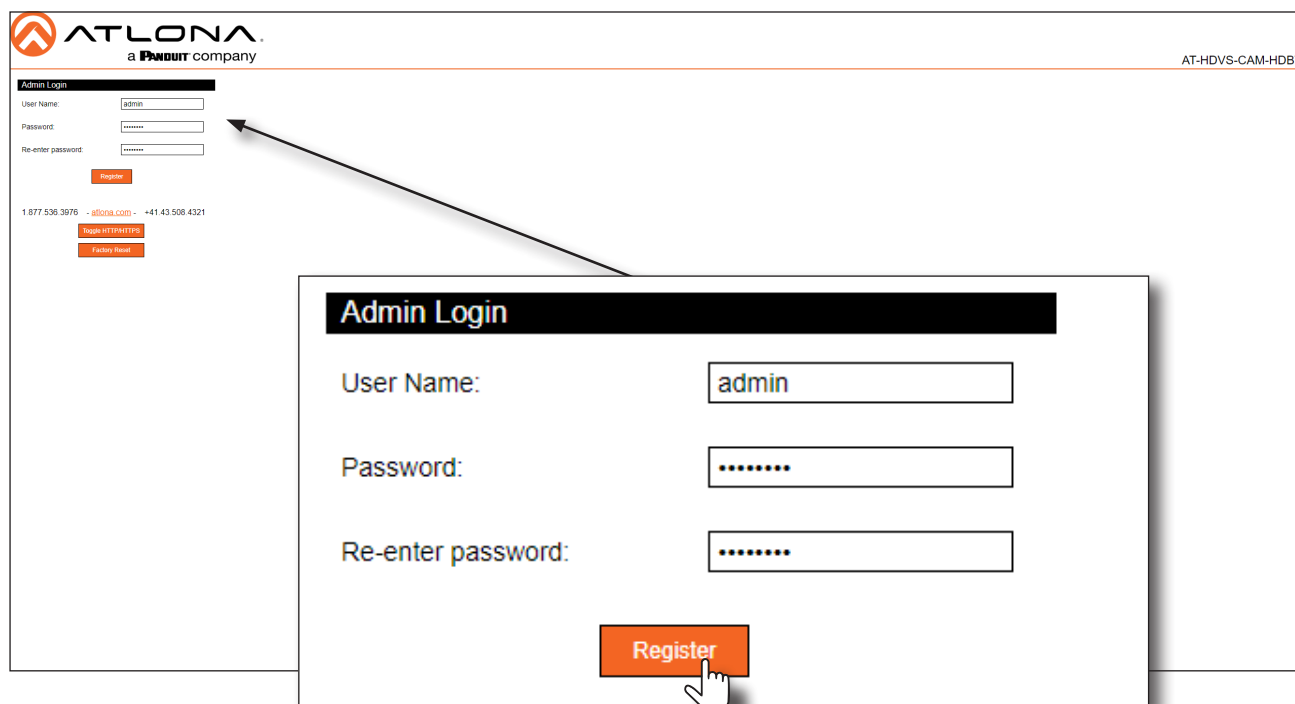

The screenshot shows the ATLONA web interface for the AT-HDVS-CAM-HDBT. The page title is "Admin Login". The form contains the following fields and buttons:

- User Name:
- Password:
- Re-enter password:
- Buttons: Register, 1 877 536 3976, Support HTTP/HTTPS, Factory Reset

An inset box titled "Admin Login" provides a magnified view of the form fields, showing the "User Name" field with "admin", the "Password" field with ".....", and the "Re-enter password" field with ".....". A mouse cursor is pointing at the "Register" button.

6. The **Login** page will be displayed.
7. Registration is complete.


Logging In

Before logging in to the web server, make sure the registration process has been completed. Refer to [Registration \(page 33\)](#) for more information.

1. Launch the desired web browser and enter the IP address of the AT-HDVS-CAM-HDBT in the address bar.
2. Enter the correct username and password in the respective fields. To clear the **User Name** and **Password** fields, click the **Clear** button.



NOTE: If using a secure connection, click the **Toggle HTTP/HTTPS** button.

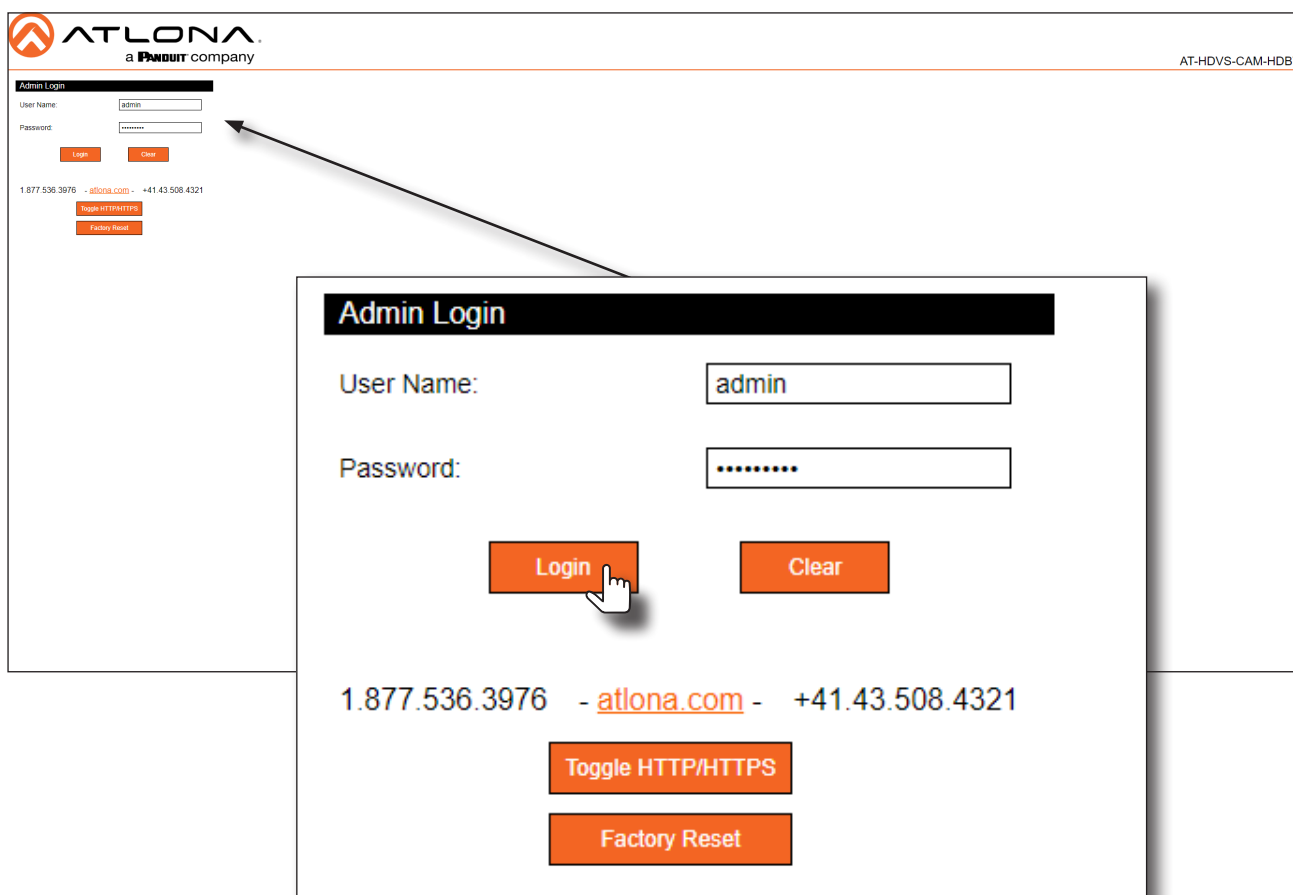

3. Click the **Login** button.
4. The **Info** page will be displayed and the login process is complete.

Status Page

The **Status** page provides basic information about the AT-HDVS-CAM-HDBT, including the software version.



The screenshot shows the AT-HDVS-CAM-HDBT status page. The interface includes a sidebar with navigation options: Home, Device Settings, Visual Settings, and Camera. The main content area displays 'System Information' with a table of device details and a 'Download Log' button.

| System Information | | Download Log |
|--------------------|-------------------|--------------|
| Model | AT-HDVS-CAM-HDBT | |
| MAC Address | 88:98:80:0D:04:08 | |
| Serial Number | 562914 | |
| MCU Firmware | V3.1.0 | |
| Camera Firmware | V2.5.8 | |
| AF Firmware | V4.0.2 | |

Model

The model of the unit.

MAC Address

The hardware MAC address of the unit.

Serial Number

The serial number of the unit.

MCU Version

The version of MCU firmware.

Camera Firmware

The version of camera firmware.

AF Firmware

The version of firmware which controls Auto-Focus.

Download Log

Click this button to download the information in the **System Information** group, to an Excel file.

Firmware Page



Firmware Status - System

MCU

The version of MCU firmware.

Camera

The version of camera firmware.

Auto Focus

The version of firmware which controls Auto-Focus.

Firmware Update

Update File

Displays the file currently selected for the update process.

Browse

Click this button to select the desired firmware file for the update process.

Upgrade

Click this button to begin the firmware update process.

System Page



The screenshot shows the configuration page for an ATLONA device. The sidebar on the left contains the following sections:

- Home**
 - Status
 - Firmware
- Device Settings**
 - System
 - Network
 - User
 - Encoding
 - Publishing
 - RTP Multicast
 - Reset
 - Audio
- Visual Settings**
 - Picture
 - Focus
 - Exposure
 - Noise Reduction
 - Style
 - OSD
 - Video Out
- Camera**
 - Control
 - Logout

The main content area is titled "AT-HDVS-CAM-HDBT" and contains the following sections:

- Information**
 - Device Name: AT-HDVS-CAM-HDBT
 - Device ID: 1
 - Buttons: Save, Cancel
- Time**
 - Date Format: YYYYMM-DD
 - Date Separator: /
 - Zone: (GMT-08:00)PST(America & Ca)
 - Hour Type: 24 Hours
 - NTP Enable:
 - Update Interval: 1 day
 - Host URL: time.nist.gov
 - Host Port: 123
 - Buttons: Save, Cancel
- Time Synchronization**
 - Computer Time: 2021-01-13 17:00:46
 - Button: Synchronize

Information

Device Name

Displays the model of the unit.

Device ID

The device ID.

Save

Click this button to commit changes under this section.

Cancel

Click this button to abort changes under this section.

Time

Date Format

Displays the file currently selected for the update process.

Data Separator

Click this drop-down list to specify the separator between month, day, and year.

Zone

Click this drop-down list to select the desired time zone.

Hour Type

Click this drop-down list to switch the time format between 12-hour and 24-hour clocks.

NTP

Click this check box to enable the use of an external NTP server.

Configuration and Management Interfaces

Update Interval

Click this drop-down list to select the time interval (in days), which the camera will poll the NTP server. This field is only active if the **NTP** check box is marked with a checkmark.

Host URL

Specify the NTP server address in this field. This field is only active if the **NTP** check box is marked with a checkmark.

Host Port

Specify the NTP port in this field. This field is only active if the **NTP** check box is marked with a checkmark.

Save

Click this button to commit changes under this section.

Cancel

Click this button to abort changes under this section.

Time Synchronization

Computer Time

Displays the current time on the computer.

Synchronize

Click this button to synchronize the computer time.

Network Page



Network Settings

DHCP

Switch between DHCP (ON) and static (OFF).

IP Address

Specify the IP address of the AT-HDVS-CAM-HDBT in this field. This field is only active if **DHCP** is set to **OFF**.

Subnet

Specify the IP subnet mask in this field. This field is only active if **DHCP** is set to **OFF**.

Gateway

Specify the default gateway (router) address in this field. This field is only active if **DHCP** is set to **OFF**.

MAC Address

Displays the MAC address of the AT-HDVS-CAM-HDBT.

Host Name

Specify the host name of the AT-HDVS-CAM-HDBT in this field. The default host name will be HDVS-CAM-[last six digits of MAC address].

Save

Click this button to commit changes under this section.

Cancel

Click this button to abort changes under this section.

Configuration and Management Interfaces

Port Settings

Enter the required port number in each of these fields. Each field contains the default port settings. Available values are from 0 to 65535.

Save

Click this button to commit changes under this section.

Cancel

Click this button to abort changes under this section.

DNS Settings

Preferred

Enter the primary DNS server address in this field.

Alternative

Enter the failover DNS server address in this field.

User Page



The screenshot shows the ATLONA web interface for user management. The top left features the ATLONA logo and 'a PANDUIT company' text. The top right displays the device ID 'AT-HDVS-CAM-HDBT'. A left-hand navigation menu includes sections for 'Home', 'Device Settings' (with sub-items: Status, Firmware, System, Network, User, Encoding, Publishing, RTP Multicast, Reset, Audio), 'Visual Settings' (with sub-items: Picture, Focus, Exposure, Noise Reduction, Style, OSD, Video Out), and 'Camera' (with sub-items: Control, Logout). The main content area is titled 'User' and contains a 'Change password' form with three input fields: 'User Name' (containing 'admin'), 'New password', and 'Re-enter password'. Below the form are two buttons: 'Save' and 'Cancel'.

User

User Name

Enter the desired user name in this field.

New password

Enter the new password in this field.

Re-enter password

Confirm the new password by entering it in this field.


Save

Click this button to commit changes under this section.

Cancel

Click this button to abort changes under this section.

Encoding Page

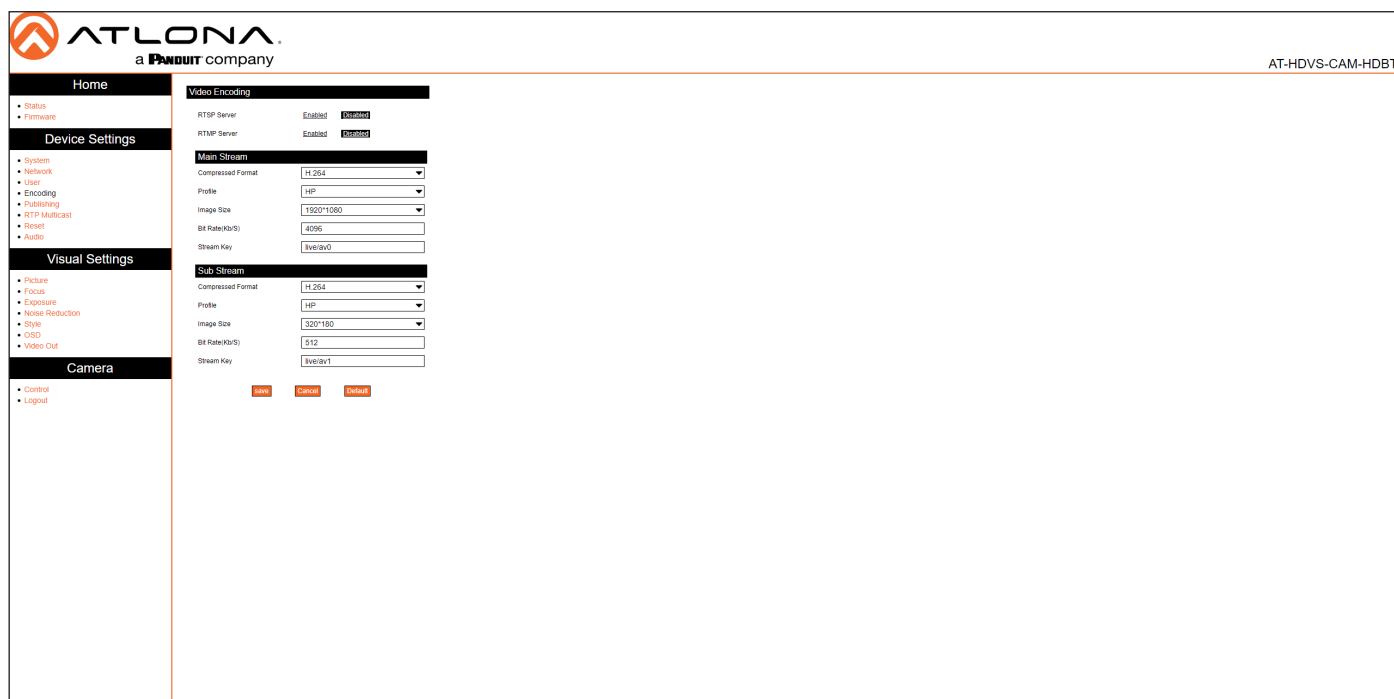

Video Encoding

RTSP Server

Enable / disable the RTSP protocol.

RTMP Server

Enable / disable the RTMP protocol.

Main Stream / Sub Stream

These settings affect the main stream, which is the primary video feed and provides the highest quality video. This stream is used by a digital recorder when saving footage to hard disk. Adjusting these settings will affect the recording size and available recording time on the hard disk.

Sub Stream is the secondary video feed and provides a lower quality video stream. This stream is used to stream video to computers and mobile devices. Adjusting these settings will affect the bandwidth of the stream.

Compressed Format

Click this drop-down list to select the desired video codec.

| Format | Description |
|--------------|--|
| H.264 (AVC) | Advanced Video Codec - Industry-standard codec that provides good-quality compressed video output. |
| H.265 (HVEC) | High-Efficiency Video Coding - Provides a higher compression ratio than H.264, thus reducing the bandwidth necessary for high-resolution (2K/4K) video capture. |

Configuration and Management Interfaces

Compressed Format

Click this drop-down list to select the desired profile.

| Profile | Description |
|---------|---|
| BP | Baseline Profile - Supports a limited set of processes and is designed to meet the needs of mobile devices. |
| MP | Main Profile - Supports a good number of processes and is typically used for devices such as set-top boxes. |
| HP | High Profile - Supports all processes of H.264 and targets FullHD (1080p) applications such as Blu-ray and satellite streams. |

Image Size

Click this drop-down list to select the desired resolution. These resolutions are available for all codecs and profiles.

| Resolution | | |
|------------|----------|---------|
| 1920x1080 | 1280x720 | 640x480 |

Bit Rate (kb/s)

Enter the desired bit rate in this field.

| Encoding Protocol | Bit Rate Range |
|-------------------|-------------------|
| H.264 | 64 ... 20480 kb/s |
| H.265 | 64 ... 40960 kb/s |

Stream Key

Enter the stream key in this field. This key (code) is used to identify the stream, allowing the stream to be displayed on a web site.

Save

Click this button to commit changes.

Cancel

Click this button to abort changes.

Default

Click this button to restore default settings.

Publishing Page



Main Stream / Sub Stream

These settings affect the main stream, which is the primary video feed and provides the highest quality video.

Sub Stream is the secondary video feed and provides a lower quality video stream. This stream is used to stream video to computers and mobile devices.

Enable

Click this check box to enable the main stream / sub stream. When a stream is enabled, the check box will be checked.

Protocol Type

This drop-down list is set to RTMP and cannot be changed.

Host Address

Specify the IP address of the stream in this field.

Host Port

Specify the port in this field.

Stream Key

Specify the stream key in this field.

Save

Click this button to commit changes.

Cancel

Click this button to abort changes.

RTP Multicast Page



Main Stream / Sub Stream

These settings affect the main stream, which is the primary video feed and provides the highest quality video.

Sub Stream is the secondary video feed and provides a lower quality video stream. This stream is used to stream video to computers and mobile devices.

Enable

Click this check box to enable the main stream / sub stream. When a stream is enabled, the check box will be checked.

Protocol Type

Click this drop-down list to set the protocol.

| Protocol | Description |
|----------|----------------------------|
| RTP | Real Time Protocol |
| TS | Transport Stream (MPEG-TS) |

Multicast Address

Specify the multicast IP address of the stream in this field.

Multicast Port

Specify the port in this field.

Access Method

Displays the fully-qualified URL of the stream, based on the above settings.

Save

Click this button to commit changes.

Cancel

Click this button to abort changes.

Reset Page



Factory Reset

Factory Reset


Click this button to factory-reset the AT-HDVS-CAM-HDBT.

Reboot

Reboot

Click this button to reboot/power-cycle the AT-HDVS-CAM-HDBT.

Audio Page

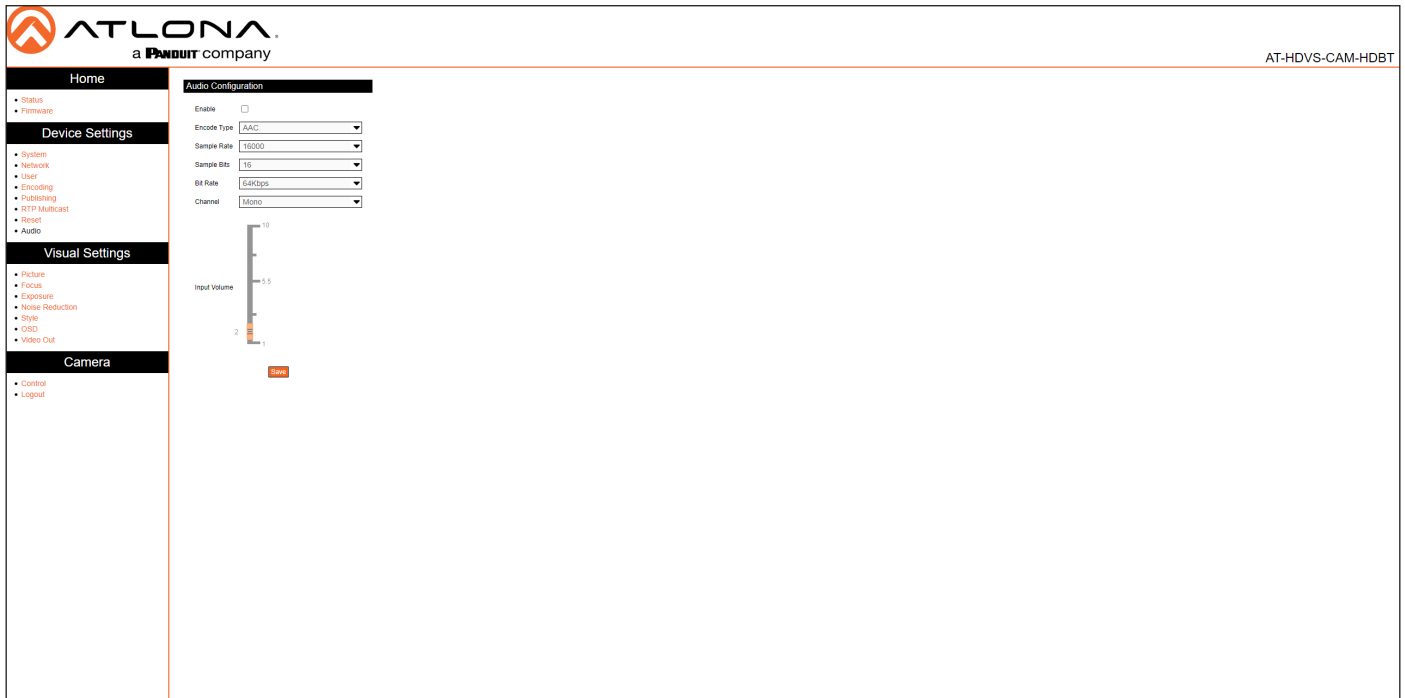

Audio Configuration

Enable

Click this check box to enable audio configuration. When enabled, this check box will be checked.

Encoding Type

Click this drop-down list to select the audio codec.

| Encoding | Bit Rate Range |
|----------|--|
| AAC | Advanced Audio Encoding - Industry-standard lossy compression for digital audio. Exhibits a higher sound quality than MP3. |
| MP3 | MPEG-1/MPEG-2 Audio Layer III - Uses lossy data-compression, discarding some data, resulting in lower-bandwidth, high-quality audio. |

Sample Rate

Selects the sample rate in Hertz. Available options are **16000** (16 kHz), **32000** (32 kHz), **44100**, (44.1 kHz) and **48000** (48 kHz).

Sample Bits

This option is set to **16** and cannot be changed.

Bit Rate

Selects the bit rate. Available options are **32 kbps**, **48 kbps**, **64 kbps**, **96 kbps**, and **128 kbps**.

Channel

Selects the number of channels that are heard on the output.

| Encoding | Bit Rate Range |
|----------|---------------------------------|
| Mono | Single-channel audio stream. |
| Stereo | Two-channel (L/R) audio stream. |

Configuration and Management Interfaces

Input Volume

Click and drag this slider to adjust the input volume.


Save

Click this button to commit changes.

Cancel

Click this button to abort changes.

Picture Page

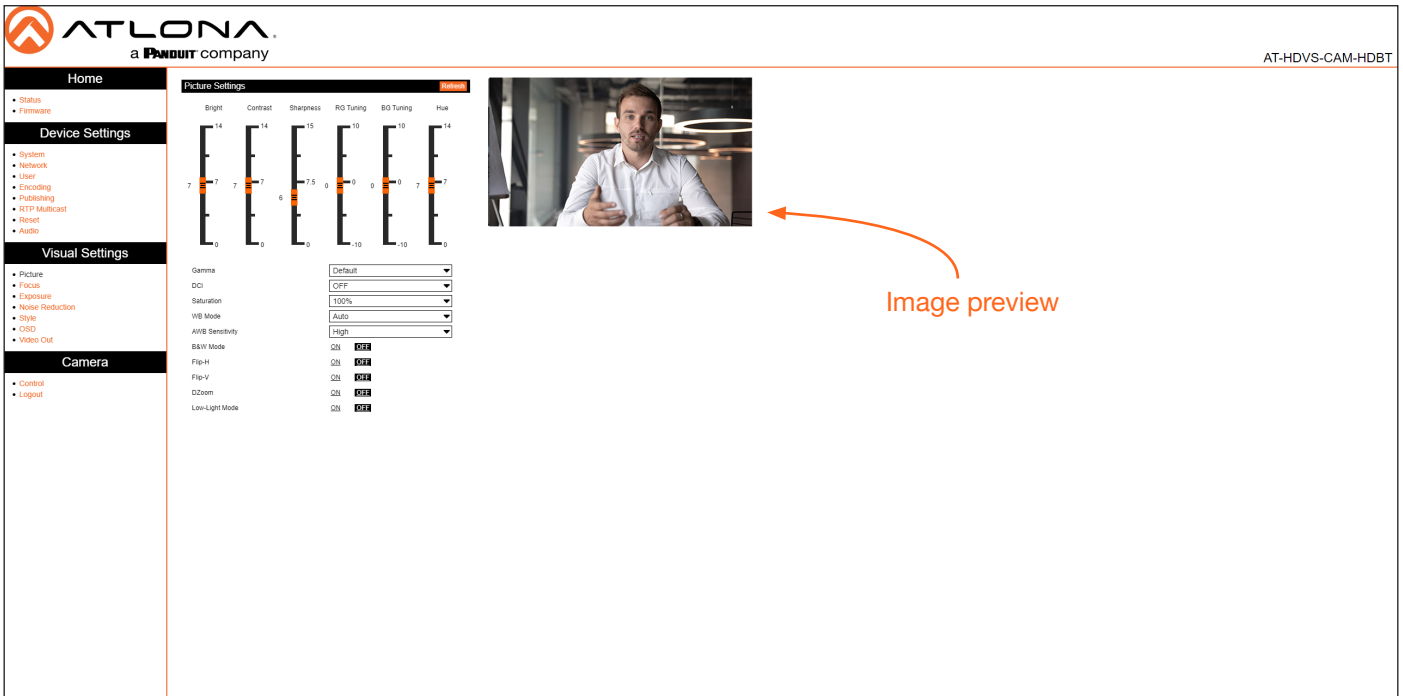

Picture Settings

Bright

Click and drag this slider to adjust the picture brightness between a value of 0 and 14. Larger values produce a brighter image. The default setting is 6.

Contrast

Click and drag this slider to adjust the picture contrast between a value of 0 and 14. Larger values produce a higher contrast image. The default setting is 7.

Sharpness

Click and drag this slider to adjust the picture sharpness between a value of 0 and 14. Larger values will produce a sharper image. The default setting is 7.5.

RG Tuning

Click and drag this slider to adjust the red-gain tuning between a value of -10 and 10. Use this feature to reduce unwanted red colors. Larger values will introduce a red tint to the image. The default setting is 0.

BG Tuning

Click and drag this slider to adjust the blue-gain tuning between a value of -10 and 10. Use this feature to reduce unwanted blue colors. Larger values will introduce a blue tint to the image. The default setting is 0.

Hue

Click and drag this slider to adjust the picture hue between a value of 0 and 14. Larger values will introduce more red into the image, while smaller values will introduce more blue into the image. The default setting is 7.

Gamma

Click this drop-down list to select the desired gamma setting. Larger values will display a darker image. The default setting is Default.

DCI

Click and drag this slider to adjust the dynamic contrast of the image. Larger values produce a higher contrast image. The default setting is OFF.

Configuration and Management Interfaces

Saturation

Click this drop-down list to select the desired saturation value. Available values are between 60% and 200% in increments of 10. Larger values will produce an image with a higher color contrast. The default setting is 100%.

WB Mode

Click this drop-down list to select the desired white balance setting.

| WB Mode | Description |
|---------|---|
| Auto | Automatically adjusts white balance based on the captured image. This is the default setting. |
| Manual | Permits manual white balance setting using the RG (Red Gain), BG (Blue Gain), and Hue slider settings. |
| OnePush | When selected, this option will display an Adjust button. Click the Adjust button to allow the camera to make automatic white balance adjustment of the captured image. This setting is different than Auto , in that the Auto setting will constantly adjust the image, based on the lighting. The OnePush option, allows the white balance to be set, based on the current lighting, much like setting the white balance on a DSLR camera. |
| VAR | When selected, a Color Temp drop-down list will be displayed below the WB Mode drop-down list. Color temperature (in Kelvin) can be selected from the Color Temp drop-down list. The Color Temp drop-down list provides values from 2400K to 7100K, in increments of 100K. The Hue slider can also be used to provide granular tuning of the color temperature. |

AWB Sensitivity

Click this drop-down list to select the auto-white balance sensitivity. AWB automatically color-corrects the captured image, by analyzing the light reaching the camera sensor, and attempts to correct for any color shifts that may otherwise take place.

B&W Mode

Setting this value to **ON** will remove color information from the image.

Flip-H

When set to **ON**, the image will be horizontally flipped.

Flip-V

When set to **ON**, the image will be vertically flipped.


DZoom

When set to **ON**, dynamic zoom will be enabled.

Low-Light Mode

When set to **ON**, low-light mode is enabled. This provides better image quality in low-light environments.

Focus Page

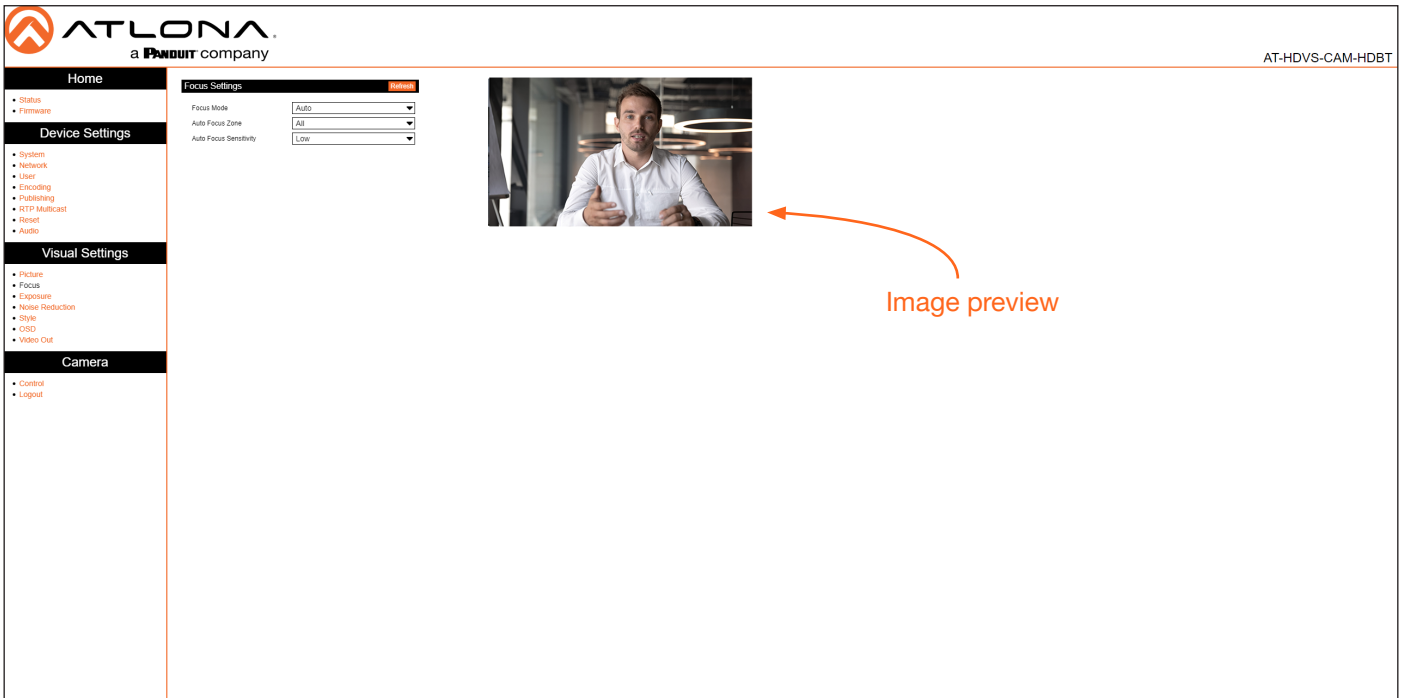

Focus Settings

Focus Mode

Click this drop-down list to select the desired focus mode.

| Focus Mode | Description |
|------------|--|
| Auto | Automatically adjusts focus based on the captured image. |
| Manual | Permits manual focus control. |
| OnePush | When selected, this option will adjust the focus based on the currently captured image. The same focus setting will be applied to all other camera movement. |


Auto Focus Zone

Click this drop-down list to select the zone where auto focus will be applied. Available options are Top, Center, Bottom, and All. The default setting is All.

Auto Focus Sensitivity

Click this drop-down list to select the auto focus sensitivity. Available options are Low, Med, and High. The default setting is Low.

Exposure Page

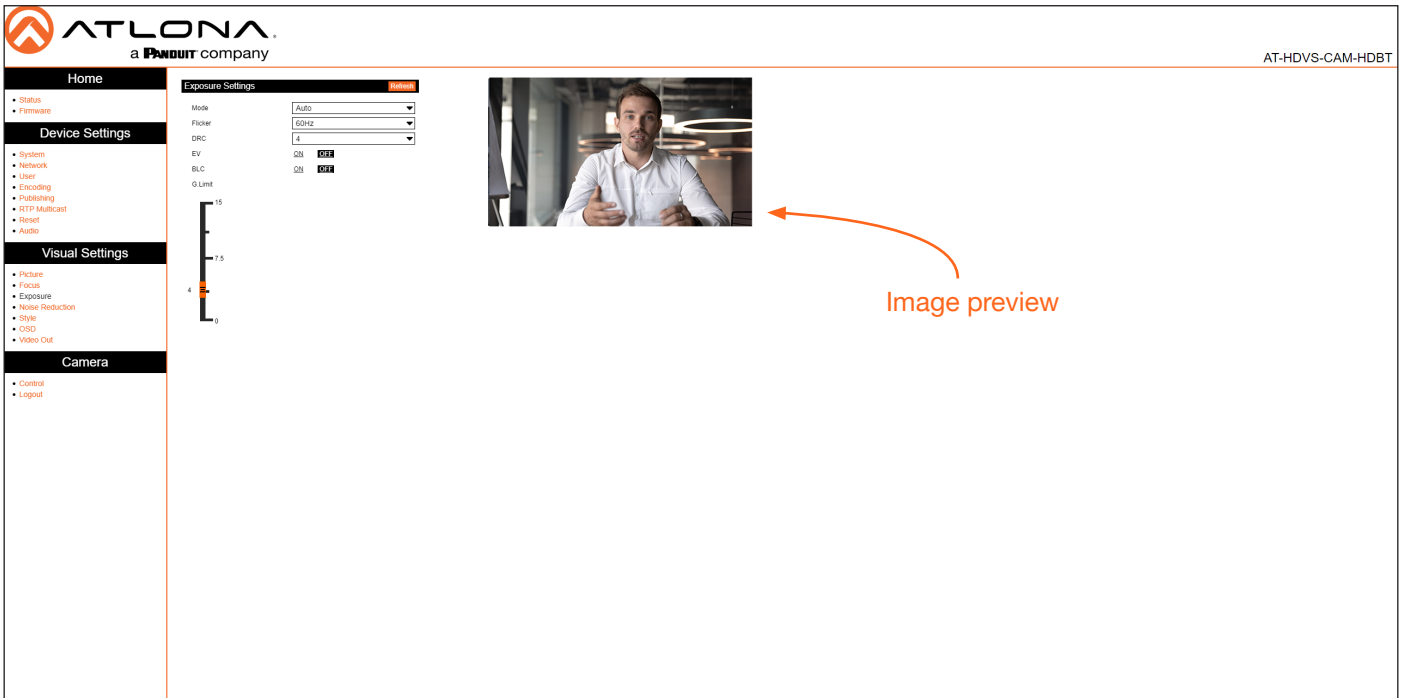

Exposure Settings

Mode

Click this drop-down list to select the desired mode.

| Mode | Description |
|--------|---|
| Auto | Automatically adjusts the exposure, based on available light. |
| Manual | <p>Permits manual exposure control. When selected, the following options will be available: Iris, Shutter, and Gain. These options are similar to aperture, shutter speed, and ISO speed in a DSLR camera.</p> <p>Iris: Click this drop-down list to select the f-stop value. The larger the value, the smaller the diameter of the iris (aperture). Larger values permit less light into the camera sensor, making the image darker.</p> <p>Shutter: Click this drop-down list to select the shutter speed. This is the time interval required to open and close the shutter during each frame of video. Larger values (fast shutter speeds) will allow less light to enter the camera sensor, producing darker images, but will produce crisp video. Low values (slow shutter speeds) will allow more light to enter the camera sensor, allowing for brighter images, but will make moving objects appear blurry.</p> <p>Gain: Click and drag this slider to adjust the gain. Gain is similar to adjusting the ISO (image noise) values on a DSLR. Larger values will increase the brightness of the image in low-light environments, but will introduce noise (grain) into the image. Smaller values decrease the image brightness in bright/outside environments and introduce less noise into the image.</p> |
| SAE | Shutter Automatic Exposure (SAE). When selected, this option will measure the incoming light and automatically adjust the iris (aperture) based on the selected shutter speed. |

Configuration and Management Interfaces

| Mode | Description |
|--------|---|
| AAE | Aperture Automatic Exposure (AAE). When selected, this option will measure the incoming light and automatically adjust the shutter speed based on the selected iris (aperture) setting. |
| Bright | When selected, a Bright slider will be displayed. The larger the value, the brighter the image. |

Flicker

Click this drop-down list to set the flicker setting. Available values are 50 Hz, 60 Hz, and OFF. The default setting is OFF. Note that this option is not available when Mode is set to Manual.

DRC

Dynamic Range Control. DRC is the measurement between maximum and minimum values in an image. Larger values attempt to discern between different color values in the image.


EV

Exposure Value. This option essentially combines both shutter speed and iris (aperture) into a single value. However, unlike independently adjusting shutter speed and iris settings, this value restricts the effect to the image exposure. When this option is set to ON, then an EV Level slider bar will be displayed.

BLC

Back Light Compensation. BLC is a feature which automatically adjusts the exposure control of the camera. When enabled, BLC will attempt to increase the ambient foreground light and “darken” any background light. For example, a subject standing in front of a window in the daytime, will produce a sillhouetted effect. Enabling BLC will compensate for the difference in lighting by enhancing the foreground lighting on the subject.

Noise Reduction Page

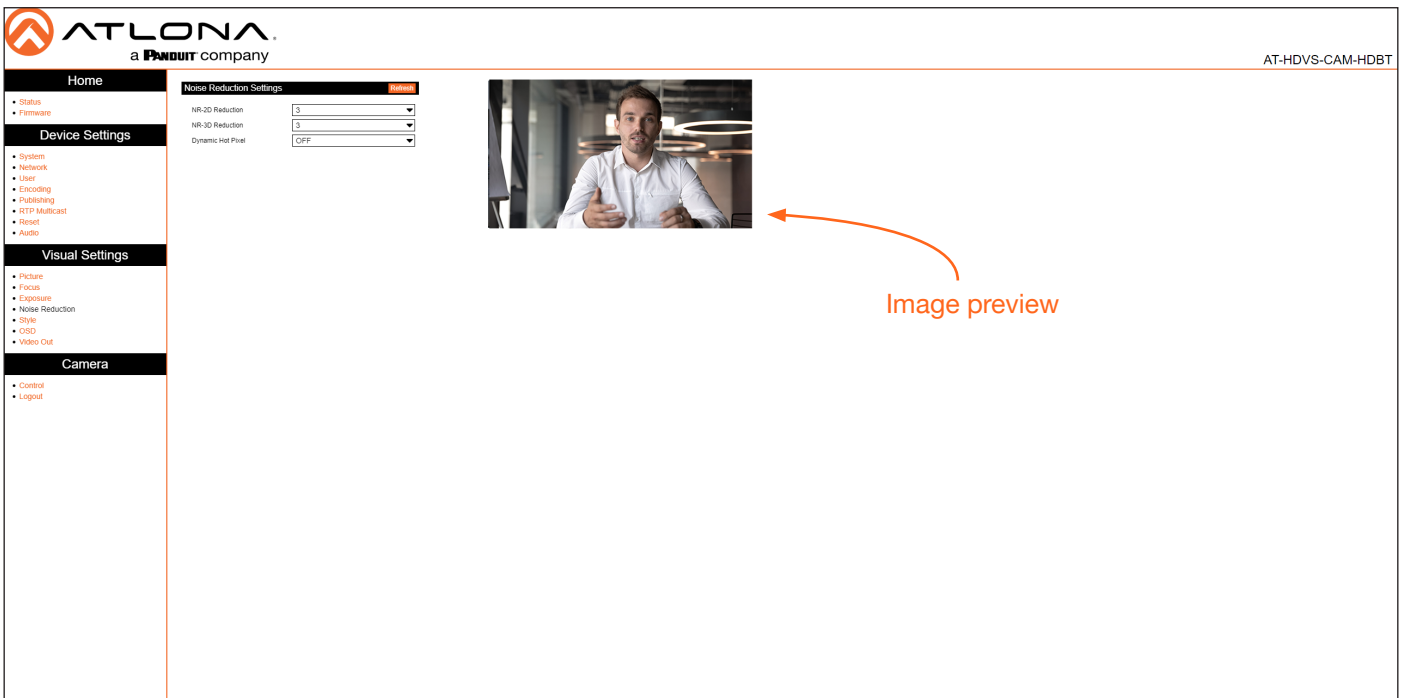

The screenshot displays the ATLONA web interface for the AT-HDVS-CAM-HDBT device. The interface is divided into a sidebar and a main content area. The sidebar contains navigation menus for Home, Device Settings, Visual Settings, and Camera. The main content area is titled 'Noise Reduction Settings' and features three dropdown menus: 'NR-2D Reduction' (set to 3), 'NR-3D Reduction' (set to 3), and 'Dynamic Hot Pixel' (set to OFF). To the right of these settings is a live video feed showing a man in a white shirt. An orange arrow points from the text 'Image preview' to this video feed.

Noise Reduction Settings

Image noise is defined as pixels which do not represent any color. Image noise is usually present when shooting in low-light environments.

NR-2D

Click this drop-down list to select the desired 2D noise reduction setting. Apply 2D noise to environments where there is a lot of motion, such as live events. Available values are OFF, 1 ... 7, and Auto.


NR-3D

Click this drop-down list to select the desired 3D noise reduction setting. Apply 3D noise reduction to environments where there is no movement. Available values are OFF, 1 ... 7, and Auto.

Dynamic Hot Pixel

Hot pixels are sometimes referred to as “stuck” pixels, and appear bright “specks” in the image. Hot pixels tend to appear when using slower shutter speeds and/or high gain settings. This feature will eliminate these pixels. Click the drop-down list to select the desired setting. Larger values will be more aggressive at removing hot pixels. Available values are: OFF and 1 ... 5.

Style Page

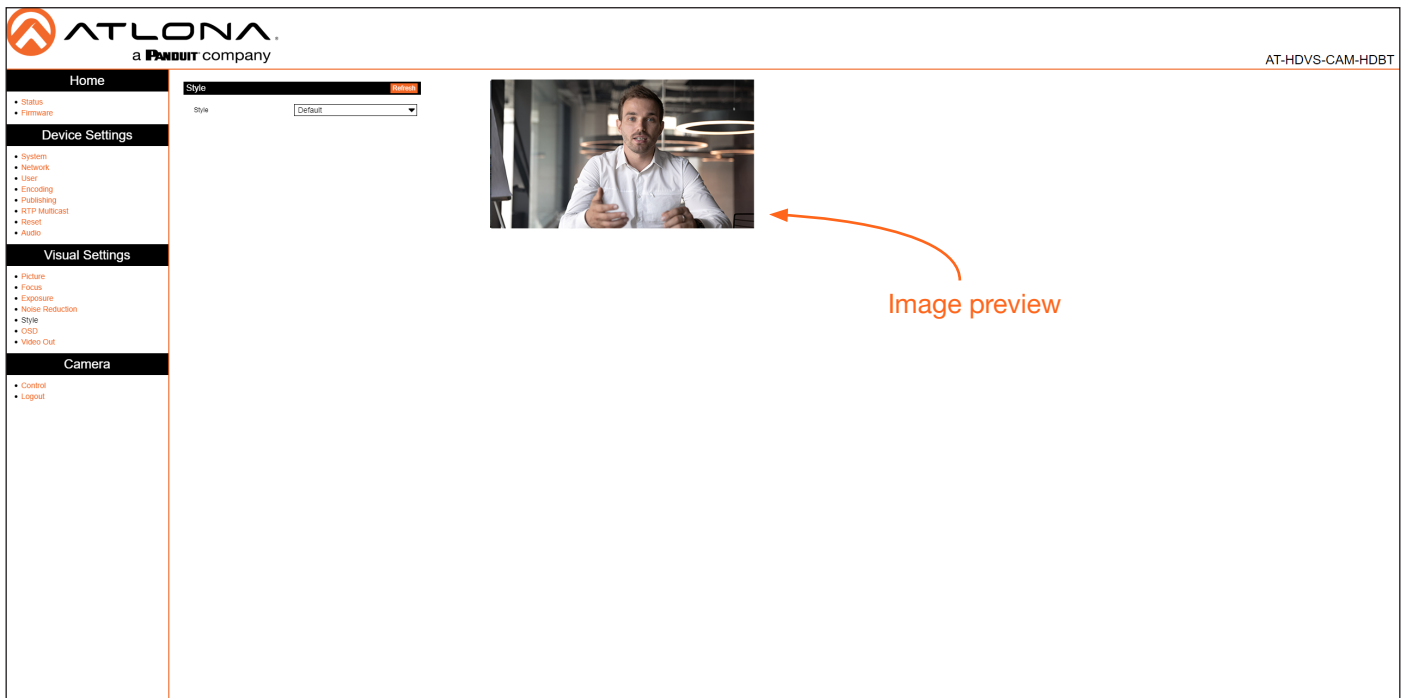


The screenshot displays the ATLONA web interface for the AT-HDVS-CAM-HDBT device. The interface features a sidebar on the left with navigation options: Home, Device Settings (including Status, Firmware, System, Network, Users, Encoding, Publishing, RTP Multicast, Reset, and Audio), Visual Settings (including Picture, Focus, Exposure, Noise Reduction, Style, OSD, and Video Out), and Camera (including Control and Logout). The main content area shows the 'Style' configuration page, which includes a dropdown menu currently set to 'Default' and a video preview window. An orange arrow points to the video preview window with the text 'Image preview'.

Style

Style

Click this drop-down list to select the desired image style. Style is an image preset, which produces a desired look. Available options are: Default, Normal, Clarify, Bright, and Soft.

OSD Page

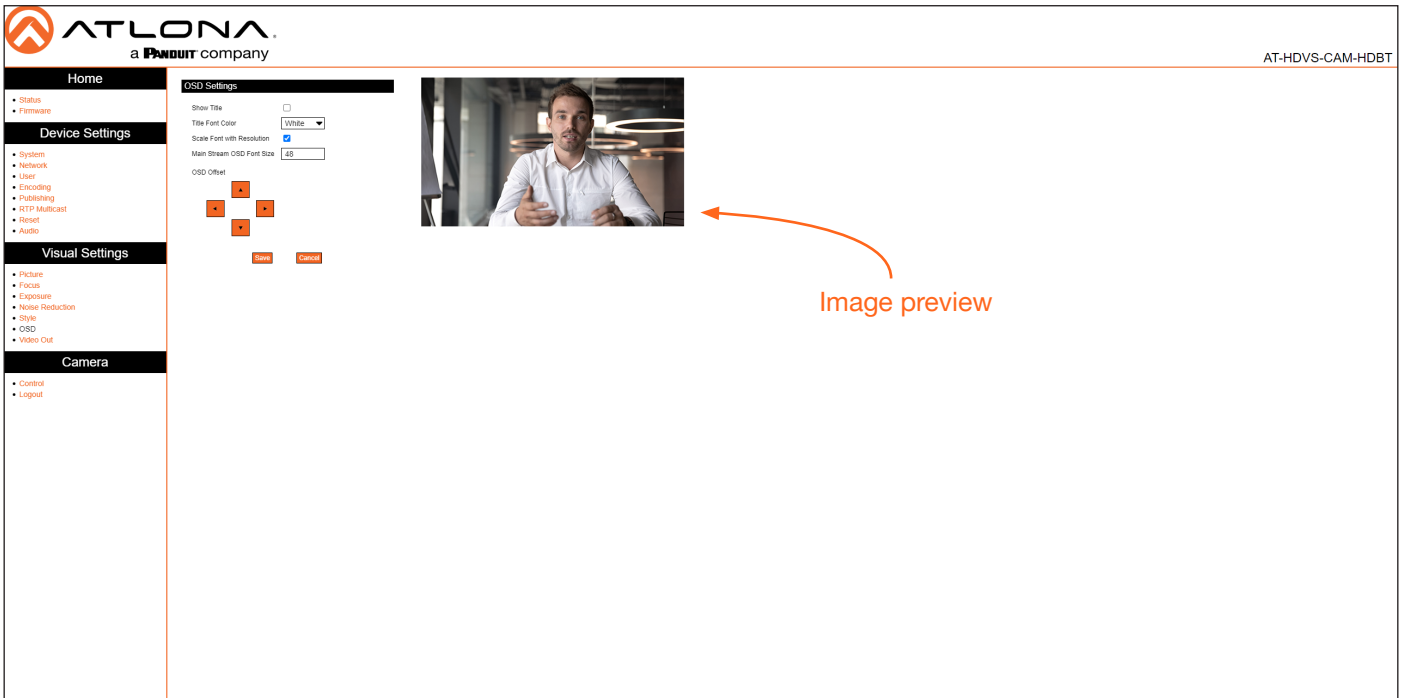

OSD Settings

Show Title

Click this check box to display the device name in the upper-left corner (default position) of the screen. When enabled, the check box will display a check mark. To change the device name, refer to the System > Information > Device Name on the [System Page \(page 37\)](#). Click the **Save** button to have changes take effect.

Title Font Color

Click this drop-down list to set the font color of the title. Available options are White, Black, Yellow, Red, and Blue.

Scale Font with Resolution

Click this check box to scale the font title when the resolution changes. When enabled, the check box will display a check mark.

Main Stream OSD Font Size

Specify the title font size in this field. When enabled, the check box will display a check mark. Click the **Save** button to have changes take effect.

OSD Offset

Click these arrows to position the title font on the screen. Click the **Save** button to have changes take effect.


Save

Click this button to commit changes.

Cancel

Click this button to abort changes.

Video Out Page

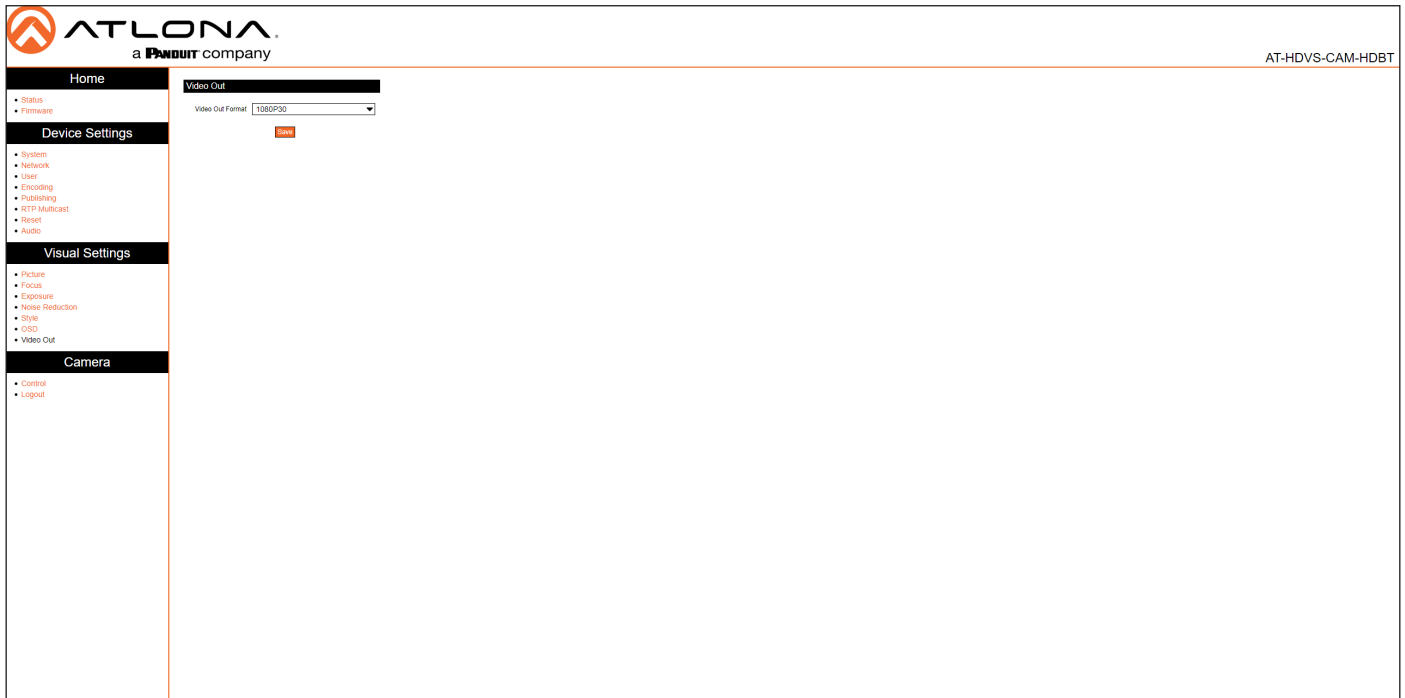

Video Out

Video Out Format


Click this drop-down list to select the desired output resolution. Available resolutions are listed in the table below.

| Format | |
|---------|------------|
| 1080P60 | 720P60 |
| 1080P50 | 720P50 |
| 1080P30 | 1080P59.94 |
| 1080P25 | 1080I59.94 |
| 1080I60 | 1080P29.97 |
| 1080I50 | 720P59.94 |

Save

Click this button to commit changes.

Control Page

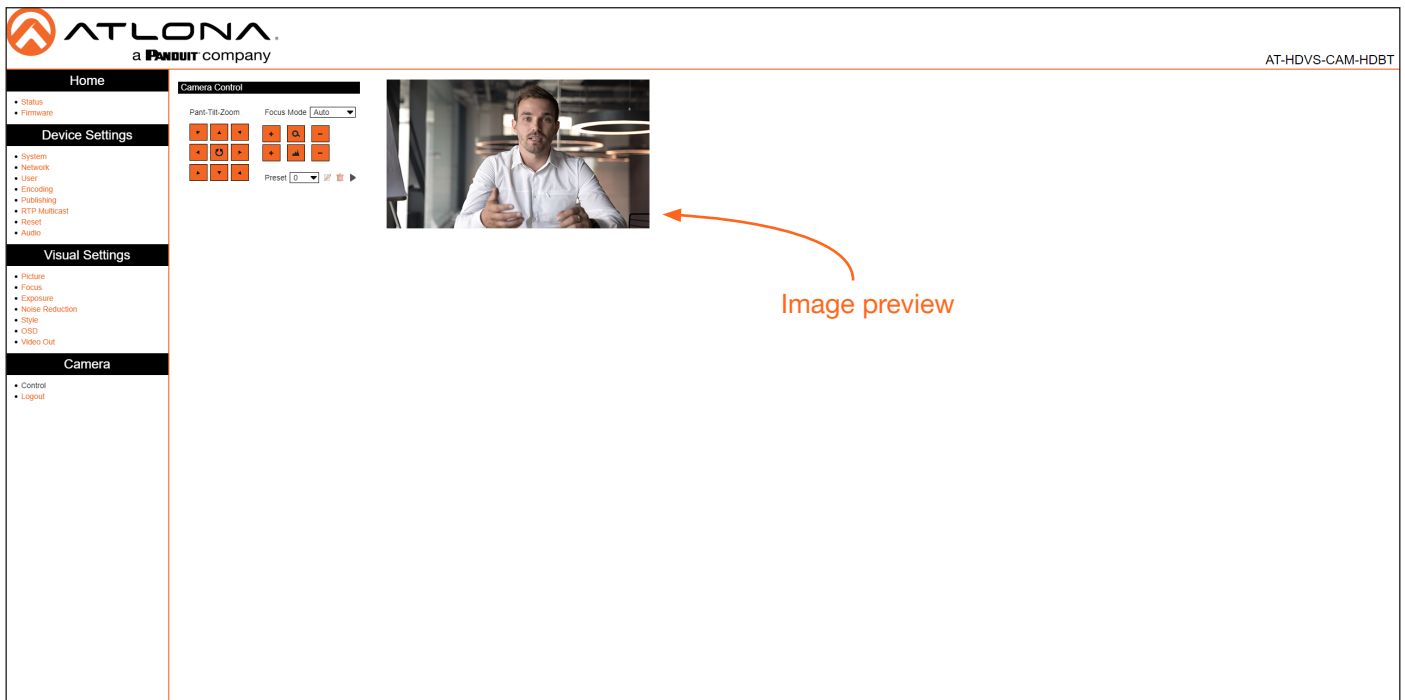

Camera Control

Refer to [Controlling the Camera \(page 18\)](#) for more information.

Pan-Tilt-Zoom

Click these arrows to adjust the pan, tilt, and zoom of the camera.

Focus Mode

Click this drop-down list to select the desired focus mode.

IR Remote and OSD

IR Remote Control

The AT-HDVS-CAM-HDBT comes with an IR remote control for full control of the camera and use of the OSD menu.



IR Remote

- Power - Toggle the camera on and off with the power button. Press and hold for 3 seconds to place the camera into standby mode.
- Number Buttons - Use in the selection or creation of camera presets.
- Focus - Adjust the focus of the camera using the + and - buttons.
- Auto - Switch the camera focus mode to auto.
- Manual - Switch the camera focus mode to manual.
- Zoom - Zoom in (+) or out (-) using these buttons.
- Set Preset - Set the camera into position then press the Set Preset button followed by a number key (0-9) to set that position to a preset.
- Clear Preset - Press clear preset followed by a number key to erase the preset set to that number.
- Arrow Buttons - Use the arrow buttons to adjust the camera position or navigate within the OSD menu.
- Home Buttons - Returns the camera to the middle position.
- BLC ON/OFF - Toggle the back light on and off.
- Menu - Use to pull up the OSD menu.

OSD

The OSD will display after pressing the MENU button.

| OSD | | | | | |
|----------|--------------------|------|-------|---------|-------------------|
| Language | English Chinese | | | | |
| Setup | Protocol | Auto | Visca | PELCO-D | PELCO-P (Options) |
| | Visca Address | 1 | 1 | | |
| | Visca Address | Off | Off | | |
| | PELCO-P Address | 1 | | | 1 |
| | PELCO-D Address | 1 | | 1 | |
| | Baudrate | 9600 | 9600 | 9600 | 9600 |

| OSD Cont. | | | | | | | |
|-----------|------------------------|-------------------|--|---------|---------------------------------|-------|--|
| Camera | Exposure | Mode | Auto | Bright | AAE | SAE | Manual |
| | | Bright | | 7 | | | 0 to 23 |
| | | IRIS | | | F1.8 | | F1.8 F1.8, F2.0, F2.4, F2.8, F3.4, F4.0, F4.8, F5.6, F6.8, F8.0, F9.6, F11, Close |
| | | Shutter | | | | 1/100 | 1/100 1/25, 1/30, 1/50, 1/60, 1/90, 1/100, 1/120, 1/180, 1/250, 1/325, 1/500, 1/1000, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000 |
| | | EV | ON | | | | ON, OFF |
| | | EV Level | 0 | | | | -7 to 7 |
| | | BLC | OFF | | | | ON, OFF |
| | | Flicker | 50Hz | 50Hz | 50Hz | | OFF, 50Hz, 60Hz |
| | | G. Limit | 4 | 4 | 4 | | 0 to 15 |
| | | DRC | 4 | 4 | 4 | 4 | Close, 1 to 8 |
| | Color | WB Mode | Auto | Onepush | Manual | 7000K | 6500K 5500K, 5000K, 4500K, 4000K, 3500K, 3000K |
| | | RG Tuning | 0 | | RG145 | | -10 to 10 |
| | | BG Tuning | 0 | | BG56 | | -10 to 10 |
| | | Saturation | 100% | 100% | 100% | 100% | 100% |
| | | Hue | 7 | 7 | 7 | 7 | 7 |
| | | AWB Sens | High | | | | High, Middle, Low |
| | Image | Brightness | 6 | | 0 to 14 | | |
| | | Contrast | 8 | | 0 to 14 | | |
| | | Sharpness | 6 | | 0 to 15 | | |
| | | Flip-H | OFF | | OFF, ON | | |
| | | Flip-V | OFF | | OFF, ON | | |
| | | B&W Mode | Color | | Color, B&W | | |
| | | Gamma | 0.45 | | Default, 0.45, 0.50, 0.55, 0.63 | | |
| | | DCI | 2 | | Close, 1 to 8 | | |
| | | Image Quality | 0 | | 0 to 5 | | |
| | Focus | Focus Mode | Auto | | Auto, Onepush, Manual | | |
| | | AF-Zone | Center | | Center, Top, All, Bottom | | |
| | | AF-Sensitivity | Low | | Low, High, Middle | | |
| | Noise Reduction | NR-2D | 2 | | OFF, Auto, 1 to 7 | | |
| | | NR-3D | 4 | | OFF, 1 to 8 | | |
| | | Dynamic Hot Pixel | OFF | | OFF, 1 to 5 | | |
| | Style | Clarity | Clarity, Normal, Default, Soft, Bright | | | | |

| OSD Cont. | | | |
|-----------------|------------------|----------------------------------|--------------------|
| P/T/Z | Speed By Zoom | ON | ON, OFF |
| | Zoom Speed | 8 | 1 to 8 |
| | Acc Curve | Slow | Slow, Fast |
| Version | MCU Version | X.X.X | 20YY-MM-DD |
| | Camera Version | X.X.X | 20YY-MM-DD |
| | AF Version | X.X.X | 20YY-MM-DD |
| Ethernet | IP Address | XXX.XXX.XXX.XXX | e.g. 10.20.20.233 |
| | Subnet Mask | XXX.XXX.XXX.XXX | e.g. 255.255.255.0 |
| | Gateway | XXX.XXX.XXX.XXX | e.g. 10.20.20.1 |
| Restore Default | Restore Default? | NO, YES - Restore Default Now... | |

Remote Functions

The included IR Remote Control provides a set of functions which can be used to change the behavior of the AT-HDVS-CAM-HDBT. Each function is invoked by sequentially pressing the following series of keys on the keypad.

| Function | Keystrokes |
|--|----------------------|
| Clear all presets | [#] + [#] + [#] |
| Flip video horizontally and vertically | [*] + [#] + [9] |
| Reset username, password, and IP address | [*] + [#] + [MANUAL] |
| Switch video format to 1080p60 | [#] + [#] + [0] |
| Switch video format to 1080p50 | [#] + [#] + [1] |
| Switch video format to 1080i60 | [#] + [#] + [2] |
| Switch video format to 1080i50 | [#] + [#] + [3] |
| Switch video format to 720p60 | [#] + [#] + [4] |
| Switch video format to 720p50 | [#] + [#] + [5] |
| Switch video format to 1080p30 | [#] + [#] + [6] |
| Switch video format to 1080p25 | [#] + [#] + [7] |
| Switch video format to 720p30 | [#] + [#] + [8] |
| Switch video format to 720p25 | [#] + [#] + [9] |

Appendix

Specifications

| Video | | |
|---|--|-------------------|
| HD/SD/VESA (all resolutions are @30/25/20/15/10/5Hz) | 1080p, 720p, 1024x768, 1024x576, 960x540, 800x600, 640x360, 720x576, 640x480, 352x288, 320x240, 320x180, 176x144 | |
| Viewing Angle | 6.43° (telephoto), 60.9° (wide-angle) | |
| Effective Pixels | 2.07 million | |
| Total Pixels | 2.10 million | |
| Focus Settings | Auto / Manual | |
| F-Stop | f/1.6 - f/3.0 | |
| Focal Length | 4.7 mm - 47 mm | |
| Zoom Ratio | 10:1 | |
| Exposure Compensation | -7 ~ +7 | |
| Minimum Illumination | 0.5 lux @ f/1.8 with Automatic Gain Control ON | |
| Signal-to-Noise Ratio (SNR) | > 55 dB | |
| Control Protocol | VISCA/Pelco-D/Pelco-P | |
| Pan Rotation | +170° to -170° | |
| Tilt Rotation | -30° to +90° | |
| Pan Control Speed | 0.1 - 180° / sec | |
| Tilt Control Speed | 0.1 - 80° / sec | |
| Temperature | Fahrenheit | Celsius |
| Operating | 14 to 122 | -10 to 50 |
| Storage | -14 to 140 | -10 to 60 |
| Operating Humidity (RH) | 20% to 80%, non-condensing | |
| Storage Humidity (RH) | 20% to 95%, non-condensing | |
| Power | | |
| Consumption | 12 W | |
| Supply | Input: 110 - 220 V AC, 50/60 Hz Output: 12 V DC, 1 A | |
| Dimensions | Inches | Millimeters |
| H x W x D | 6.59 x 5.90 x 5.90 | 167.5 x 150 x 150 |
| Weight | Pounds | Kilograms |
| Device | 3.08 | 1.4 |
| Certification | | |
| Device | CE, FCC | |

